


# 16NK Double-Effect Steam-Fired Absorption Chillers

Nominal cooling capacity 345-4652 kW

50 Hz

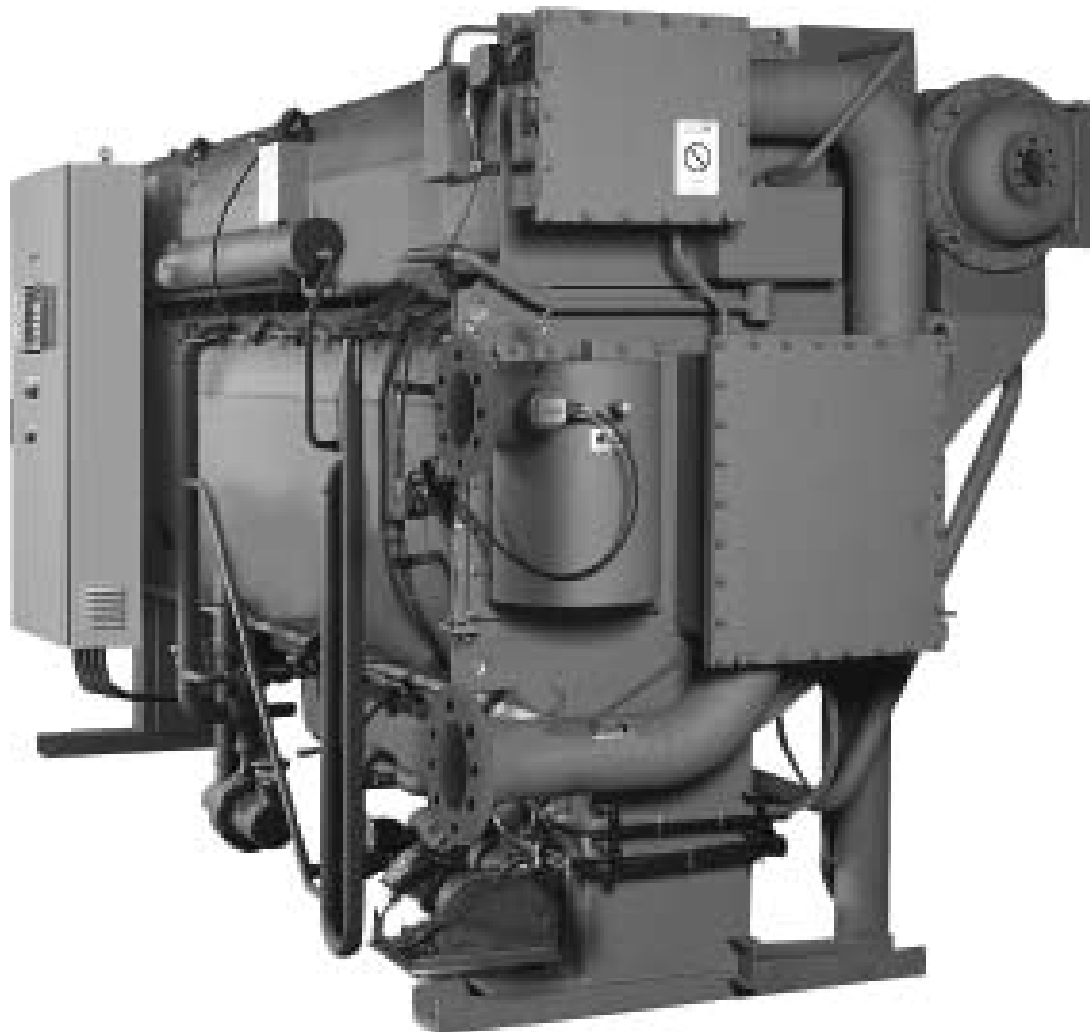

---

**Operation and maintenance instructions**

## **NOTES TO USERS**

Thank you for purchasing a Carrier/Sanyo absorption chiller.

Read this manual carefully before operating the unit. It contains instructions for the operation and maintenance of the chiller.

Please utilize the chiller to its optimum performance by carrying out the recommended daily maintenance and handling instructions as well as the periodic service.

If you need any information about maintenance contracts or have any other enquiries, please contact your Carrier service agent.

## Contents

<b>NOTES TO USERS.....</b>	<b>2</b>
<b>1 - PRECAUTIONS .....</b>	<b>4</b>
1.1 - Safety precautions.....	4
1.2 - High-temperature - high-voltage caution.....	8
1.3 - Environmental requirements.....	8
1.4 - Water treatment.....	8
<b>2 - MACHINE ILLUSTRATIONS .....</b>	<b>8</b>
2.1 - Typical chiller views - all sides.....	8
2.2 - Typical control panel .....	12
2.3 - Chiller flowchart and component function description .....	14
<b>3 - OPERATING INSTRUCTIONS .....</b>	<b>17</b>
3.1 - Self-diagnostic function.....	17
3.2 - Description of keys and their functions .....	18
3.3 - Control board settings.....	19
3.4 - Cooling operation .....	21
3.5 - Changing the information on the data display.....	22
3.6 - Changing display and setpoint.....	23
3.7 - Maintenance message.....	23
3.8 - Alarm messages and actions required.....	23
<b>4 - MAINTENANCE.....</b>	<b>25</b>
4.1 - Daily maintenance .....	25
4.2 - Periodic maintenance.....	28
4.3 - Recommended maintenance and main component replacement schedule .....	29
4.4 - Water treatment.....	30
<b>5 - TROUBLESHOOTING .....</b>	<b>32</b>
<b>6 - INSTRUCTIONS.....</b>	<b>34</b>
6.1 - Absorbent sampling method .....	34
6.2 - Concentration measurement method .....	34
<b>7 - MAINTENANCE CONTRACT .....</b>	<b>36</b>
7.1 - Annual maintenance contract.....	36
7.2 - Inspection report.....	36
7.3 - Warranty.....	36
<b>APPENDIX 1 - TROUBLESHOOTING FLOWCHART .....</b>	<b>37</b>
Problem 1 - Chiller does not run.....	37
Problem 2 - Chilled-water temperature is high.....	38
Problem 3 - Generator alarm.....	39
Problem 4 - Combustion alarm (16DJ only).....	40
Problem 5 - Water alarm .....	41
Problem 6 - Motor alarm.....	41
Problem 7 - System alarm.....	42

The cover photograph is for illustrative purposes only, and are not contractually binding.

## 1 - PRECAUTIONS

### 1.1 - Safety precautions

- Before operating this chiller, first carefully read the following instructions.
- All precautions are classified as either WARNING or CAUTION.

**WARNING:** *Failure to observe this instruction may result in serious injury or death.*

**CAUTION :** *Failure to observe this instruction may cause an injury or failure of chiller. Depending on circumstances, this may result in serious injury or death.*



This symbol denotes danger, a warning or a caution. The illustration in this symbol shows the specific description of the item.



This symbol prohibits an action. The illustration next to this symbol shows the specific description of the item.



This symbol instructs an action to be done. The illustration in this symbol shows the specific description of the item.

- After reading this manual, it should be kept in a safe place to be available for any user at any time.

### 1.1.4.1 Safety considerations




#### WARNINGS



#### TURN OFF THE BREAKER BEFORE CLEANING AND CHECKING

Always turn off the circuit breaker before cleaning and checking the cooling tower fan, chilled water pump, or other components linked to the chiller, to provide protection from electric shock or or possible injury by the rotating fan.

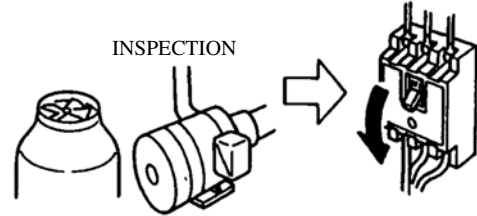

#### STOP OPERATION IN CASE OF FIRE, EARTHQUAKE OR ELECTRICAL STORMS

Stop operation in case of fire, earthquake or an electrical storm, to prevent fire or electric shock.


MUST BE OBSERVED



#### DO NOT TOUCH THE CONTROL PANEL SWITCH WITH WET HANDS

Do not touch the switch inside the control panel with wet hands to avoid electric shock.


DO NOT TOUCH

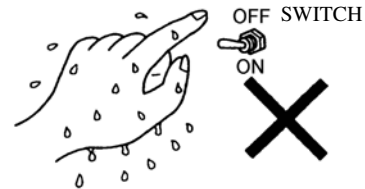

#### DO NOT TOUCH THE WIRING INSIDE THE CONTROL PANEL

Do not touch the wiring inside the control panel to avoid electric shock.

DO NOT TOUCH

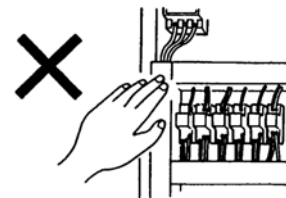




## WARNINGS



### DO NOT TOUCH ROTATING MOTOR PARTS

Keep away from rotating parts of motors or pumps to avoid possible injury.


PROHIBITED

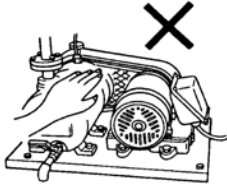

### VENTILATE THE MACHINE ROOM

Ventilate the machine room while nitrogen gas is discharged to avoid anoxia.

MUST BE OPERATED

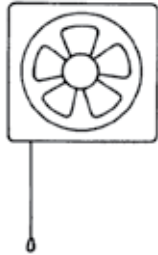


## CAUTIONS



### SOLVE ALL PROBLEMS BEFORE RESTARTING THE CHILLER

Solve all the problems before restarting the chiller after a safety or security device is activated.


MUST BE OBSERVED

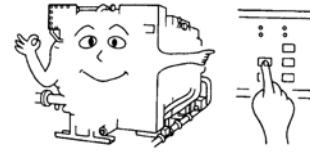

### DO NOT PLACE HEAVY OBJECTS ON THE CHILLER OR CONTROL PANEL

Do not place heavy objects on the chiller or control panel as these may fall off and cause injuries.


PROHIBITED

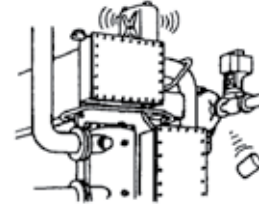

### DO NOT CLIMB ON THE CHILLER

Do not climb on the chiller as you may fall off.


PROHIBITED

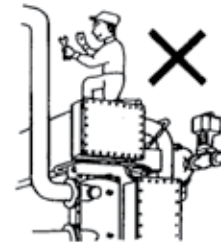

### AUTHORIZED PERSONNEL ONLY

A notice, "For Authorized Personnel Only" must be affixed to the chiller to stop unauthorized personnel from touching it. If necessary surround the chiller by a protective fence. Misuse of the chiller may cause injury.


PROHIBITED

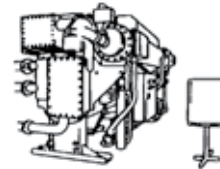

### DO NOT POUR WATER ON THE CHILLER OR CONTROL PANEL

Do not pour water on the chiller or control panel to avoid electric shock.

PROHIBITED

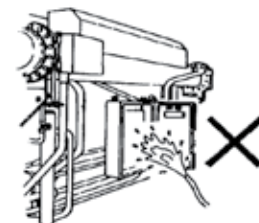




## CAUTIONS

### USE THE CORRECT POWER SUPPLY

This is indicated on the chiller name plate. Use of an incorrect power supply may cause fire or electric shock.




PROHIBITED

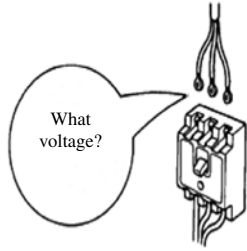

### DO NOT TOUCH HIGH-TEMPERATURE AREAS

Do not touch high-temperature areas, as they may cause burns. These areas are indicated by caution label.


PROHIBITED

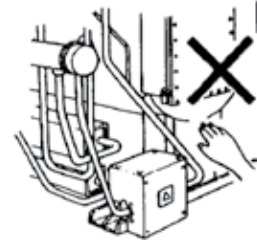

### STOP THE PURGE PUMP TO REPLACE OIL

Stop the purge pump when replacing oil to avoid possible injury by fuel spillage.


MUST BE OBSERVED

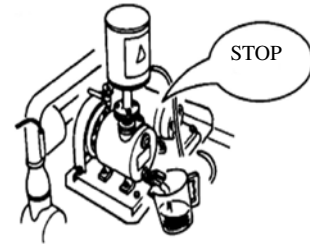

### NEVER CHANGE THE SET VALUES

Never change the set values of the safety and/or protective devices. Wrong settings may damage the chiller or cause fire.


PROHIBITED

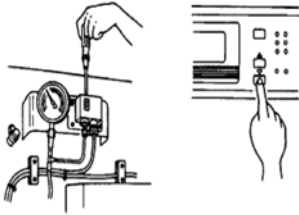

### DO NOT TOUCH THE ABSORBENT

Do not touch spare or leaked absorbent, as this can cause metal corrosion or skin disease.

PROHIBITED

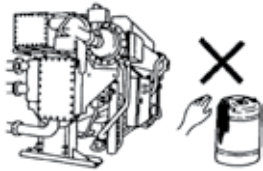


### OBSERVE THE SPECIFIED WATER/STEAM PRESSURE

The specified chilled water, cooling water and steam pressure must be strictly observed.

Incorrect pressure may cause the water to leak/spray which can lead to short circuits or burns.

MUST BE OBSERVED

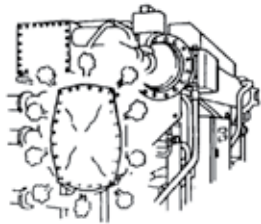

### 1.1.2 - Safety precautions for repair, moving or disposal




#### WARNINGS



#### ONLY AUTHORIZED PERSONNEL SHOULD SERVICE THE CHILLER

Only authorized personnel should service the chiller. Incorrect service could result in electric shock or fire.

PROHIBITED

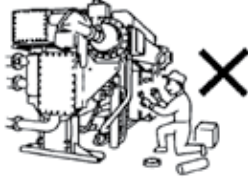


#### CAUTIONS



#### ONLY AUTHORIZED PERSONNEL SHOULD REMOVE OR REPAIR THE CHILLER

Any relocation or moving of the chiller should only be done by authorized personnel. Incorrect work could result in water leaks, electric shock or fire.


MUST BE OBSERVED

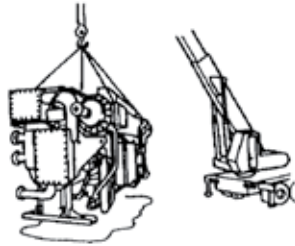

#### ONLY AUTHORIZED PERSONNEL SHOULD DISPOSE OF THE CHILLER

To dispose of the chiller, contact local specialists. Incorrect disposal may result in absorbent leaks and cause metal corrosion or skin disease, electric shock or fire.

MUST BE OBSERVED

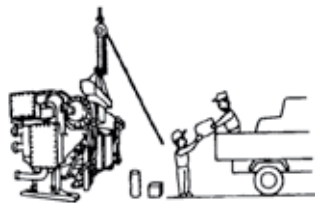


### 1.1.3 - Operating precautions


1. Keep the purge valve tightly shut to prevent air from leaking into the chiller, which may cause the failure of the chiller.
2. Keep the power supply to the control panel turned on, unless carrying out maintenance or service.
3. During the chiller dilution cycle the chilled-water pump (both the primary side and the secondary side) and air handling unit must be operated for the required time. The chiller has some cooling capacity, even in the dilution cycle. Do not stop the air handling unit before the required time to prevent possible subcooling.
4. Do not perform an insulation test on the control circuits of the electric controller.
5. Use a Carrier recommended interlock system to stop/start the auxiliary equipment. The interlock system automatically stops/starts the chilled-water pump and cooling water pump. Follow the start procedure in Figure 1 below.

Fig. 1 - Auxiliary equipment start/stop sequence

#### Start sequence

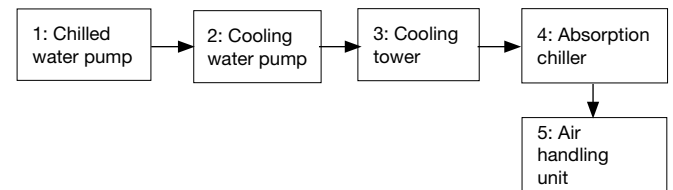

#### Stop sequence

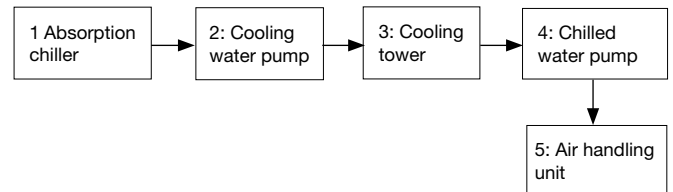

## 1.2 - High-temperature - high-voltage caution

- Do not touch the chiller during operation since its surface becomes hot.
- Do not touch the absorbent pump, the refrigerant pump, and the purge pump during operation, since their surface becomes hot.
- Do not touch the junction box during operation, since it contains high-voltage wiring.
- Do not touch the terminal box during operation, since it contains high-voltage wiring.

## 1.3 - Environmental requirements

### 1.3.1 - Installation considerations

The 16NK absorption chiller is designed for indoor installation in a machine room. The protection rating of the chiller is IP40. Room temperature should be maintained between 5°C and 40°C to protect against solution crystallization during chiller shutdown. The humidity in the machine room must be kept below 90%.

### 1.3.2 - Field wiring

The machines should be connected to a power source that complies with overvoltage category III (IEC 60664). All other wiring should comply with overvoltage category II.

### 1.3.3 - Altitude

Please install the absorption chiller at a maximum height of 1000 m above sea level. If the location is higher than 1000 m above sea level, please contact your local Carrier office.

## 1.4 - Water treatment


Refer to chapter 4 "Maintenance".

## 2 - MACHINE ILLUSTRATIONS

### 2.1 - Typical chiller views - all sides

#### 2.1.1 - 16NK 11 to 63


Fig. 2 - Water header side

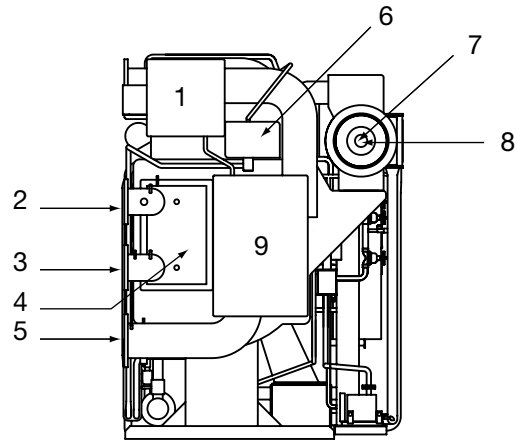

#### Legend

- 1 Condenser
- 2 Chilled water outlet
- 3 Chilled water inlet
- 4 Evaporator
- 5 Cooling water inlet
- 6 Low-temperature generator
- 7 High temperature generator
- 8 Steam inlet
- 9 Absorber

Fig. 3 - Water header side (rear)

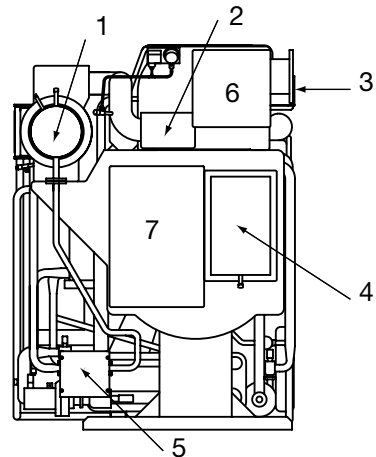


#### Legend

- 1 High-temperature generator
- 2 Low-temperature generator
- 3 Cooling water outlet
- 4 Evaporator
- 5 Steam trap
- 6 Condenser
- 7 Absorber




**Fig. 4 - Control panel side (evaporator side)**

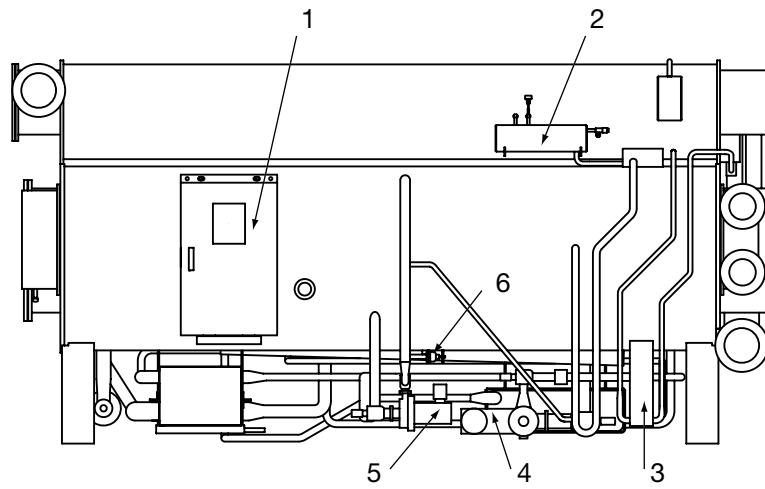

**Legend**

- 1 Control panel
- 2 Purge tank
- 3 Refrigerant drain heat reclaimer
- 4 Absorbent pump 1
- 5 Refrigerant pump
- 6 Refrigerant blow valve


**Fig. 5 - High-temperature generator side (absorber side)**

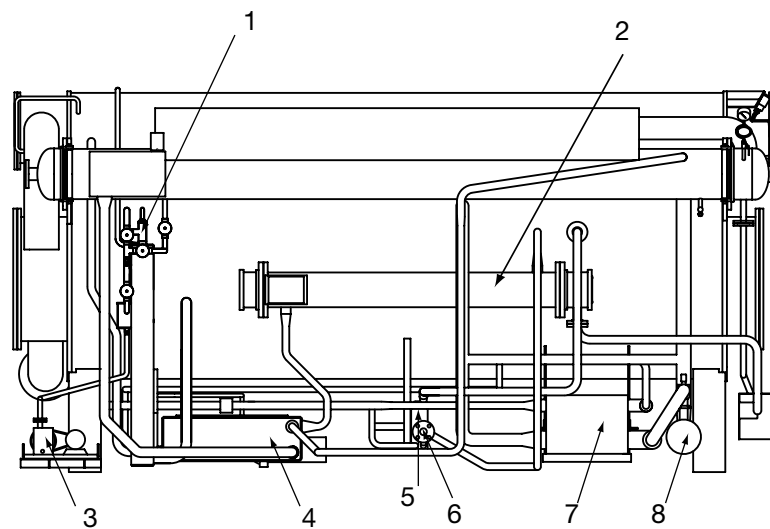

**Legend**

- 1 Purge unit
- 2 High-temperature heat reclaimer
- 3 Purge pump
- 4 Low-temperature heat exchanger
- 5 Low-temperature heat reclaimer
- 6 Steam drain outlet
- 7 High-temperature heat exchanger
- 8 Absorbent pump 2


Fig. 6 - Water header side

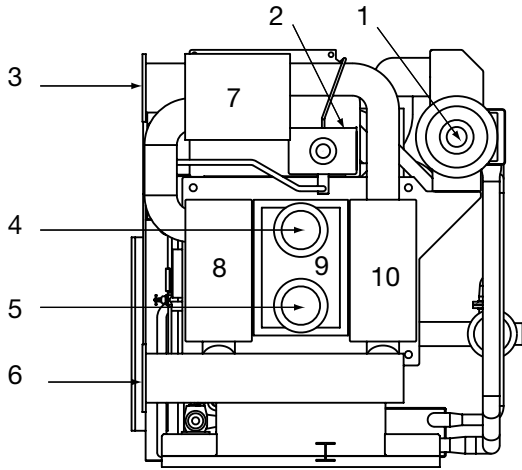

**Legend**

- 1 Steam inlet/high-temperature generator
- 2 Low-temperature generator
- 3 Cooling water outlet
- 4 Chilled water outlet
- 5 Chilled water inlet
- 6 Cooling water inlet
- 7 Condenser
- 8 Absorber
- 9 Evaporator
- 10 Absorber


Fig. 7 - Water header side (rear)

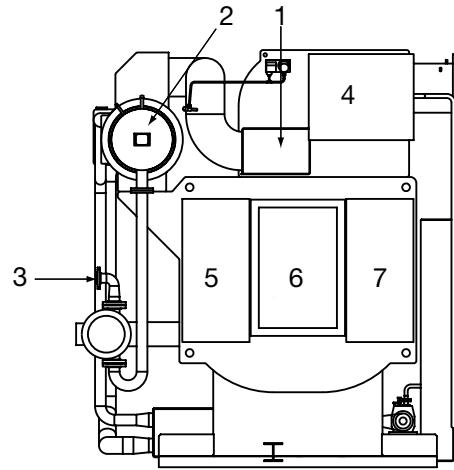

**Legend**

- 1 Low-temperature generator
- 2 High-temperature generator
- 3 Steam drain outlet
- 4 Condenser
- 5 Absorber
- 6 Evaporator
- 7 Absorber


Fig. 8 - Control panel side

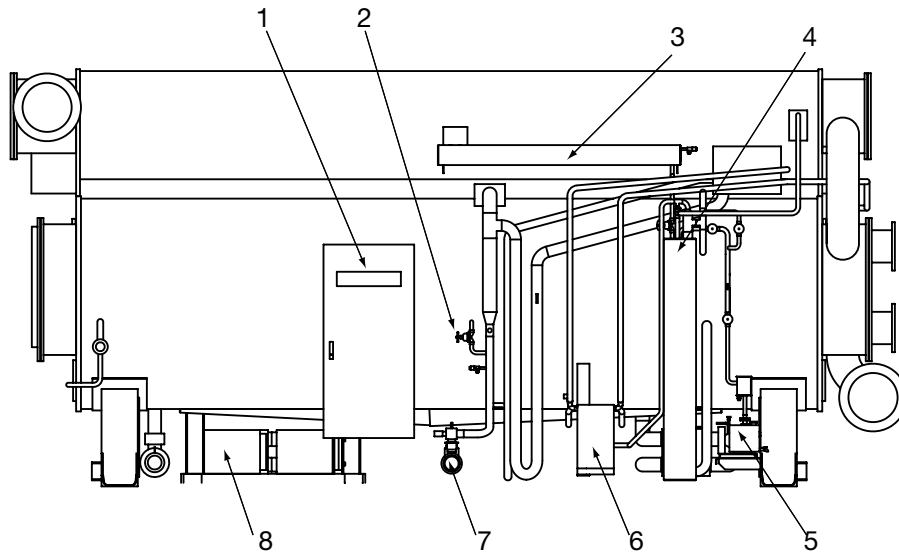

**Legend**

- 1 Control panel
- 2 Refrigerant blow valve
- 3 Purge tank
- 4 Purge unit
- 5 Purge pump
- 6 Refrigerant drain heat exchanger
- 7 Refrigerant pump
- 8 Low-temperature heat exchanger

**Fig. 9 - High-temperature heat reclaimer side**

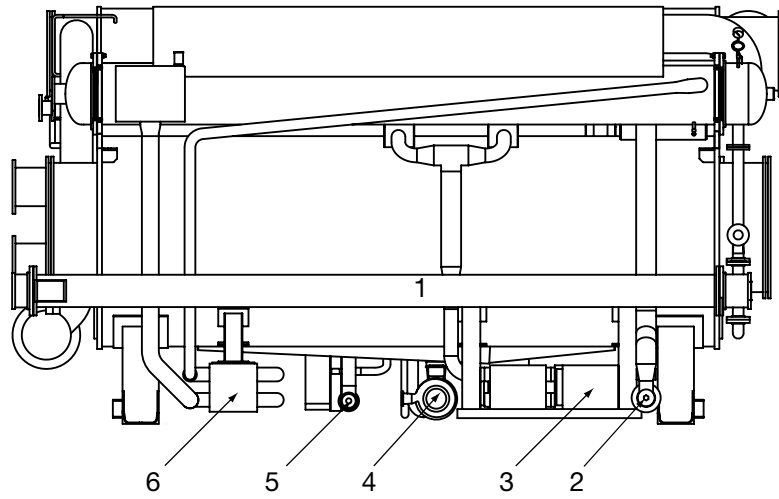


**Legend**

- 1 High-temperature heat reclaimer
- 2 Absorbent pump 2
- 3 Low-temperature heat exchanger
- 4 Absorbent pump 1
- 5 Refrigerant pump
- 6 High-temperature heat exchanger

## 2.2 - Typical control panel


Fig. 10 - Control panel (CE type)

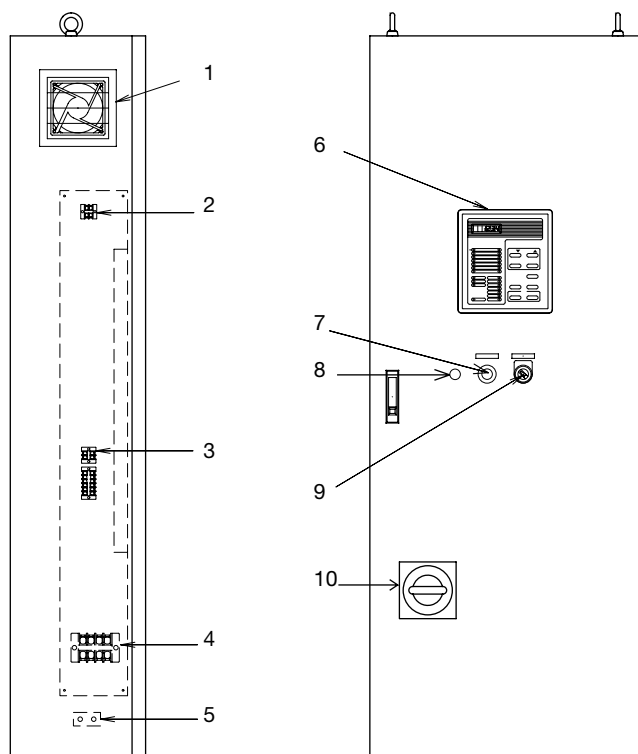

### Legend

- 1 Fan
- 2 Terminal block
- 3 Terminal block
- 4 Terminal block for power supply
- 5 Earth terminal
- 6 Control board
- 7 Purge indication light
- 8 Alarm buzzer
- 9 Purge pump on/off switch
- 10 Operating handle


Fig. 11 - Control panel inside (CE type)

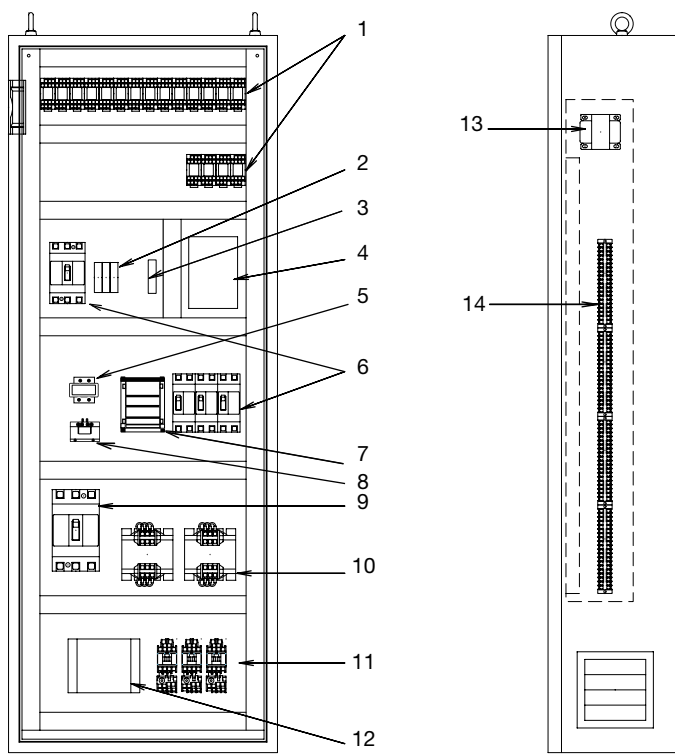

### Legend

- 1 Control relay
- 2 Circuit protector
- 3 Isolator
- 4 I/O board
- 5 AC reactor
- 6 Circuit breaker
- 7 Inverter
- 8 DC reactor
- 9 Main circuit breaker
- 10 Transformer
- 11 Electromagnetic contactor
- 12 Filter
- 13 Transformer
- 14 Terminal block

**Fig. 12 - Control board**

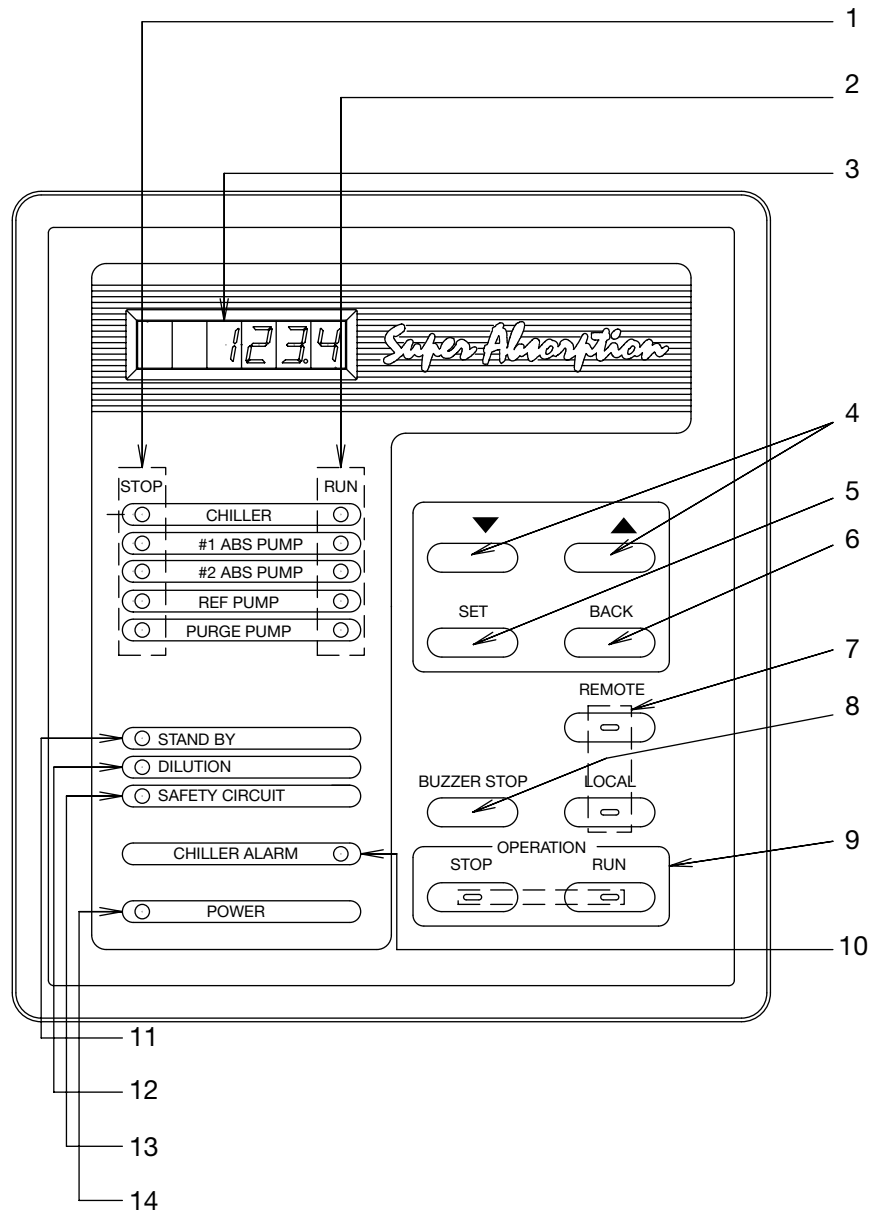

- Legend**
- 1 Stop indication light
  - 2 Operation indication light
  - 3 Data display
  - 4 Select key
  - 5 Function set key
  - 6 Back select key
  - 7 Remote/local select key with LED
  - 8 Alarm buzzer stop key
  - 9 Operation select key with LED
  - 10 Alarm indication light
  - 11 Stand-by indication light
  - 12 Dilution indication light
  - 13 Safety circuit indication light
  - 14 Power indication light

## 2.3 - Chiller flowchart and component function description

### Evaporator

The refrigerant is dispersed on the heat transfer tubes of the evaporator. Chilled water running through the heat transfer tubes of evaporator is cooled by the latent heat of vaporized refrigerant.

### Absorber

The concentrated solution is dispersed on the heat transfer tubes of absorber. The refrigerant vapour from the evaporator is absorbed on the heat transfer tubes of the absorber by the concentrated solution. Cooling water running through the heat transfer tubes of the absorber is heated by the absorption heat.

### Solution heat exchangers

In order to increase the efficiency of the chiller, two solution heat exchangers are provided. One is a low-temperature heat exchanger and the other is a high-temperature heat exchanger. In the low-temperature heat exchanger, heat exchange takes place between the concentrated solution and the diluted solution. In the high-temperature heat exchanger, heat exchange takes place between the intermediate solution and the diluted solution.

### High-temperature generator

The diluted solution from the high-temperature heat exchanger is heated and releases refrigerant vapour. It then changes to the intermediate solution.

### Low-temperature generator

The refrigerant vapour from the high-temperature generator passes through the heat transfer tubes of the low-temperature generator. The intermediate solution in the low-temperature generator is heated by the refrigerant vapour. It releases refrigerant vapour and is concentrated. It changes to the concentrated solution. The condensed refrigerant in the heat transfer tubes of the low-temperature generator flows to the condenser.

### Condenser

The refrigerant vapour from the generator is condensed on the heat transfer tubes of the condenser. Cooling water from the absorber is heated by condensation heat.

### Purge unit

The purge unit collects the non-condensable gas in the chiller and stores it in the purge tank.

### Refrigerant drain heat reclaimer

This heat exchanger is provided in order to increase the efficiency of the chiller. In this heat reclaimer heat exchange takes place between the diluted solution and the condensed refrigerant from the low-temperature generator.

### High and low-temperature heat reclaimers

These heat reclaimers are provided in order to recover heat from the steam drain, In these heat reclaimers heat exchange takes place between the diluted solution and the steam drain.

## Sensors

Symbol	Name
DT1	Chilled-water leaving temperature
DT3	High-temperature generator temperature
DT4	Low-temperature generator temperature
DT5	Condenser temperature
DT6	Chilled-water entering temperature
DT7	Cooling water entering temperature
DT8	Cooling water intermediate temperature
DT9	Cooling water leaving temperature
DT11	Evaporator refrigerant temperature
DT12	Diluted solution temperature sensor at absorber outlet
DT13	Steam drain temperature
E1-3	High-temperature generator solution level electrode
63CH	High-temperature generator pressure switch
69CH	Chilled water flow switch
69PR	Purge tank pressure switch

Fig. 13 - Flow diagram


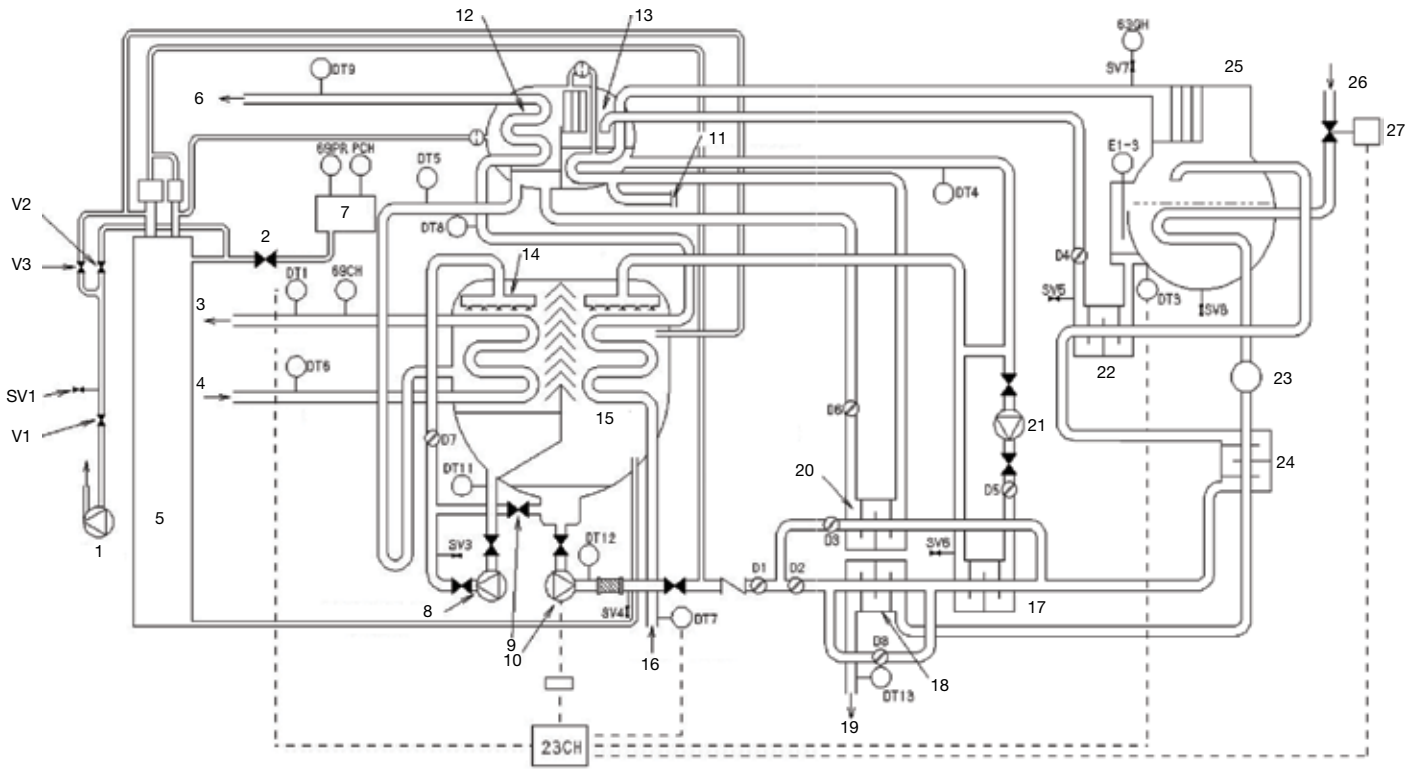


Fig. 14 - Flow diagram

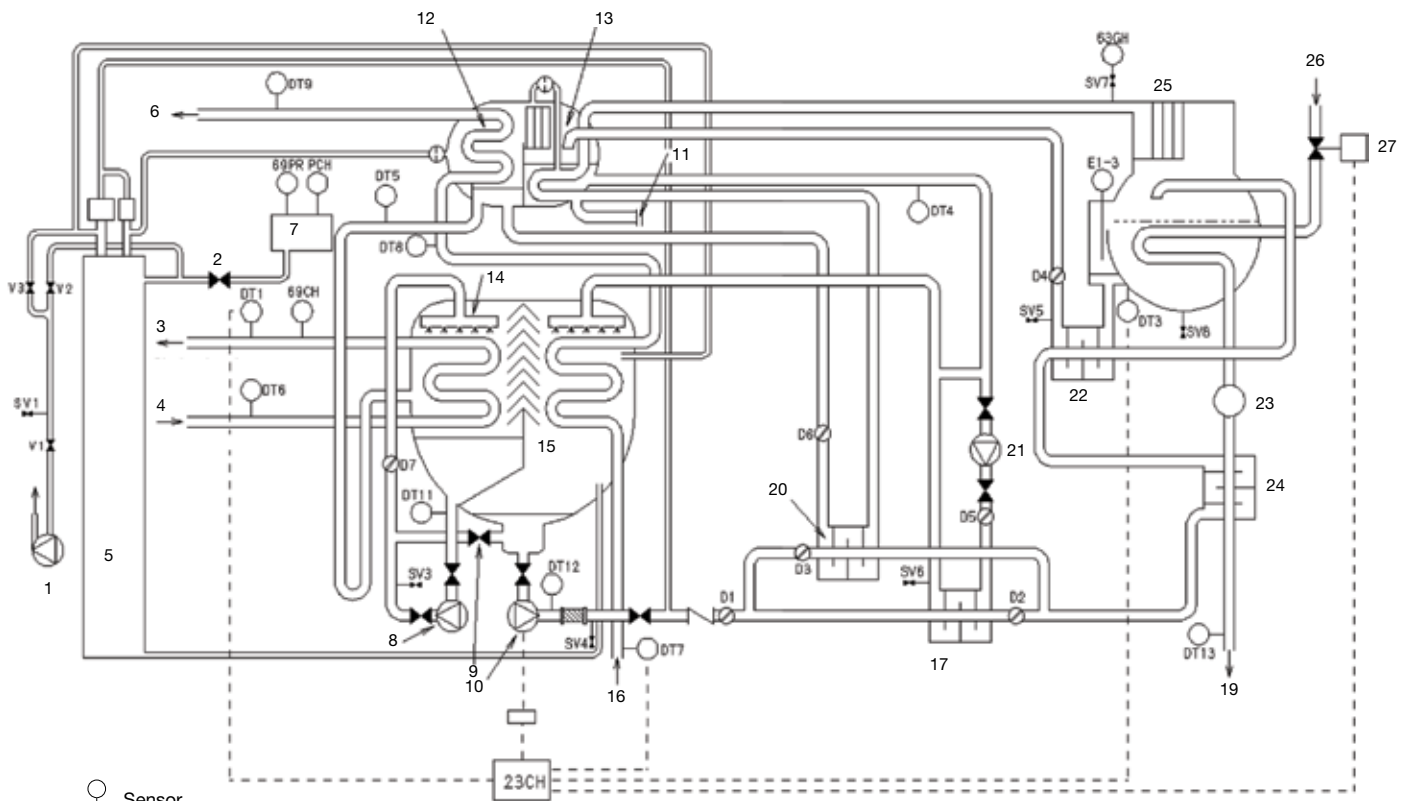

- Sensor
- S Service valve
- ▨ Strainer
- D Damper
- Z Check valve
- O Orifice
- V Valve

## Legend for Figs. 13 and 14

1	Purge pump	D1	Diluted solution main damper
2	B-valve	D2	Diluted solution low temperature heat exchanger damper
3	Chilled water outlet	D3	Diluted solution refrigerant drain heat reclaimer damper
4	Chilled water inlet	D4	Intermediate solution damper
5	Purge unit	D5	Concentrated solution damper
6	Cooling water outlet	D6	Refrigerant drain damper
7	Purge tank	D7	Refrigerant recycling damper
8	Refrigerant pump	D8	Diluted solution bypass damper
9	Refrigerant blow valve	V1	Manual purge valve
10	Absorbent pump 1	V2	Manual purge valve
11	Rupture disk	V3	Manual purge valve
12	Condenser	SV1	Charge/discharge N <sub>2</sub> gas and pressure gauge installation service valve
13	Low-temperature generator	SV3	Refrigerant service valve
14	Evaporator	SV4	Diluted solution service valve
15	Absorber	SV5	Intermediate solution service valve
16	Cooling water inlet	SV6	Concentrated solution service valve
17	Low-temperature heat exchanger	SV7	Generator maintenance service valve
18	Low-temperature heat reclaimer	SV8	Generator maintenance service valve
19	Steam drain outlet	B valve	Manual purge valve
20	Refrigerant drain heat reclaimer		
21	Absorbent pump 2		
22	High-temperature heat exchanger		
23	Steam trap		
24	High-temperature heat reclaimer		
25	High-temperature generator		
26	Steam inlet		
27	Steam control valve		



### 3 - OPERATING INSTRUCTIONS

#### 3.1 - Self-diagnostic function

The self-diagnostic function starts when the breaker inside the control panel of the chiller is turned on. After self-diagnosis is completed, the data display on the control board shows the following information.

- Data display (7-segment LED) and all LEDs light up.
- If there is no abnormality the data display shows the version number. If there is a power failure, H-10 is displayed after the power is restored.

A 7-segment LED display showing the text 'VER 1.00' in a digital font. The display is divided into seven segments, with the first three showing 'VER' and the last four showing '1.00'.

**NOTE:** The version number differs with each chiller type.


- The data display shows the generator temperature.

A 7-segment LED display showing the temperature '120.4'. The display is divided into seven segments, with the first two showing '12', the third showing a decimal point, and the last two showing '04'.

(120.4)


If the self-diagnosis function detects an error, this will be shown on the data display. For the alarm indication, please refer to chapter 3.8.

**Fig. 15 - Control panel**

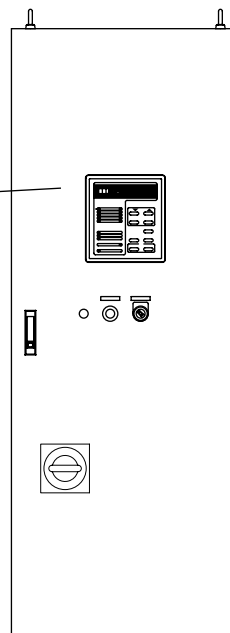

## 3.2 - Description of keys and their functions

Fig. 16 - Typical control board

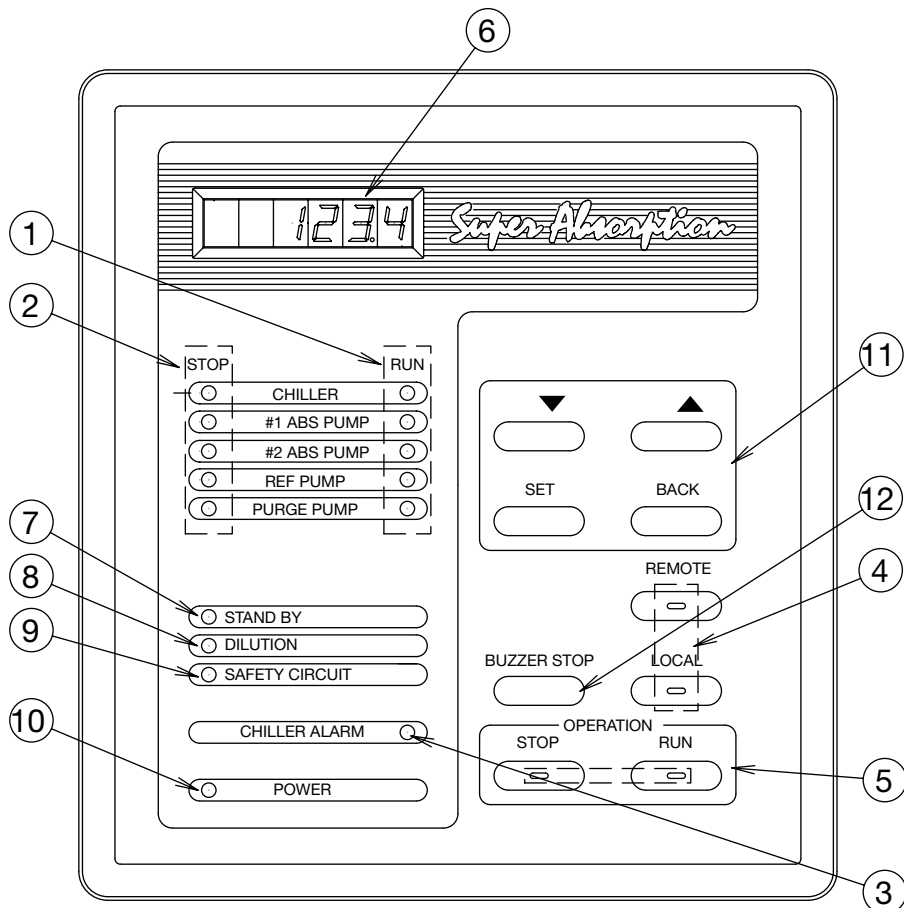

### Legend


1	Operation indication light:	The operation indication light is on when the chiller is running.
2	Stop indication light:	The stop indication light is on when the chiller is shut down.
3	Alarm indication light:	The alarm indication light is on when an alarm occurs.
4	Remote/local select key with LED:	To select remote operation or local operation.
5	Operation select key with LED:	Key used to run/stop the chiller. The stop key is also used for alarm reset.
6	Data display (7-segment LED):	Shows the temperature, setpoint, etc.
7	Standby indication light:	On when the chiller is waiting for the interlock signals form the chilled water and the cooling water pump.
8	Dilution indication light:	On during the dilution cycle.
9	Safety circuit indication light:	On when power is supplied to the control circuit.
10	Power indication light:	On when power is supplied to the control circuit.
11	Data select key:	To change the menu and set a new value.
12	Alarm buzzer stop key:	To stop the alarm buzzer.

### 3.3 - Control board settings


#### 3.3.1 -Time setting

Refer to Figure 17.

**Fig. 17 - Display example**

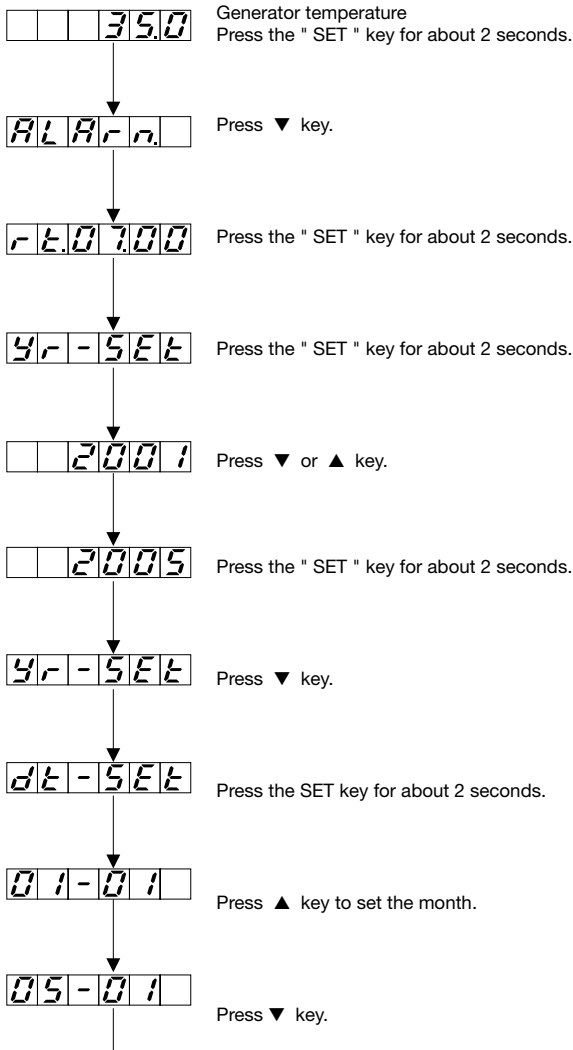

**Fig. 17 - Display example (cont.)**

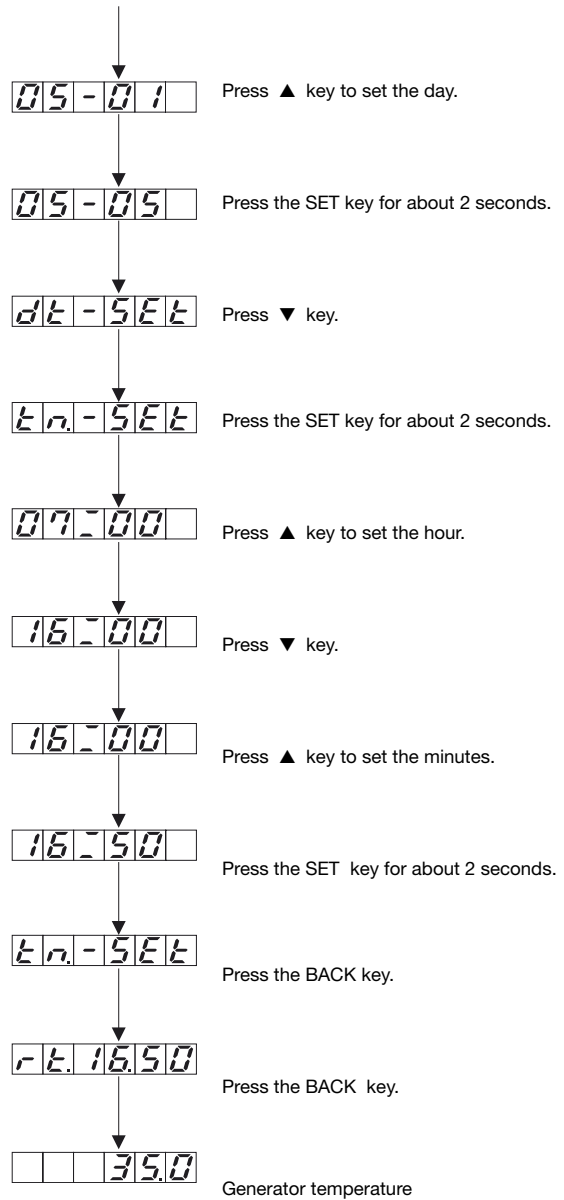

#### 3.3.2 - Battery backup

Refer to Figure 18.

##### SW3


Connect a backup battery which is used to maintain the time setting when a power failure occurs. Turn it ON after installing the equipment. CR-2025 is used as the backup battery and has an accumulative operating period of about six months.

##### NOTES:

1. SW3 (battery backup) is set to OFF at the factory to avoid using battery power.
2. If SW3 (battery backup) is set to OFF when a power failure occurs, F-21 (CPU alarm) or F-23 (Time set alarm) is displayed. Please reset the time setting.
3. If SW3 (battery backup) is set to ON and F-21 or F-23 is displayed, it is necessary to replace the battery.




Fig. 18- SW3 backup switch and backup battery

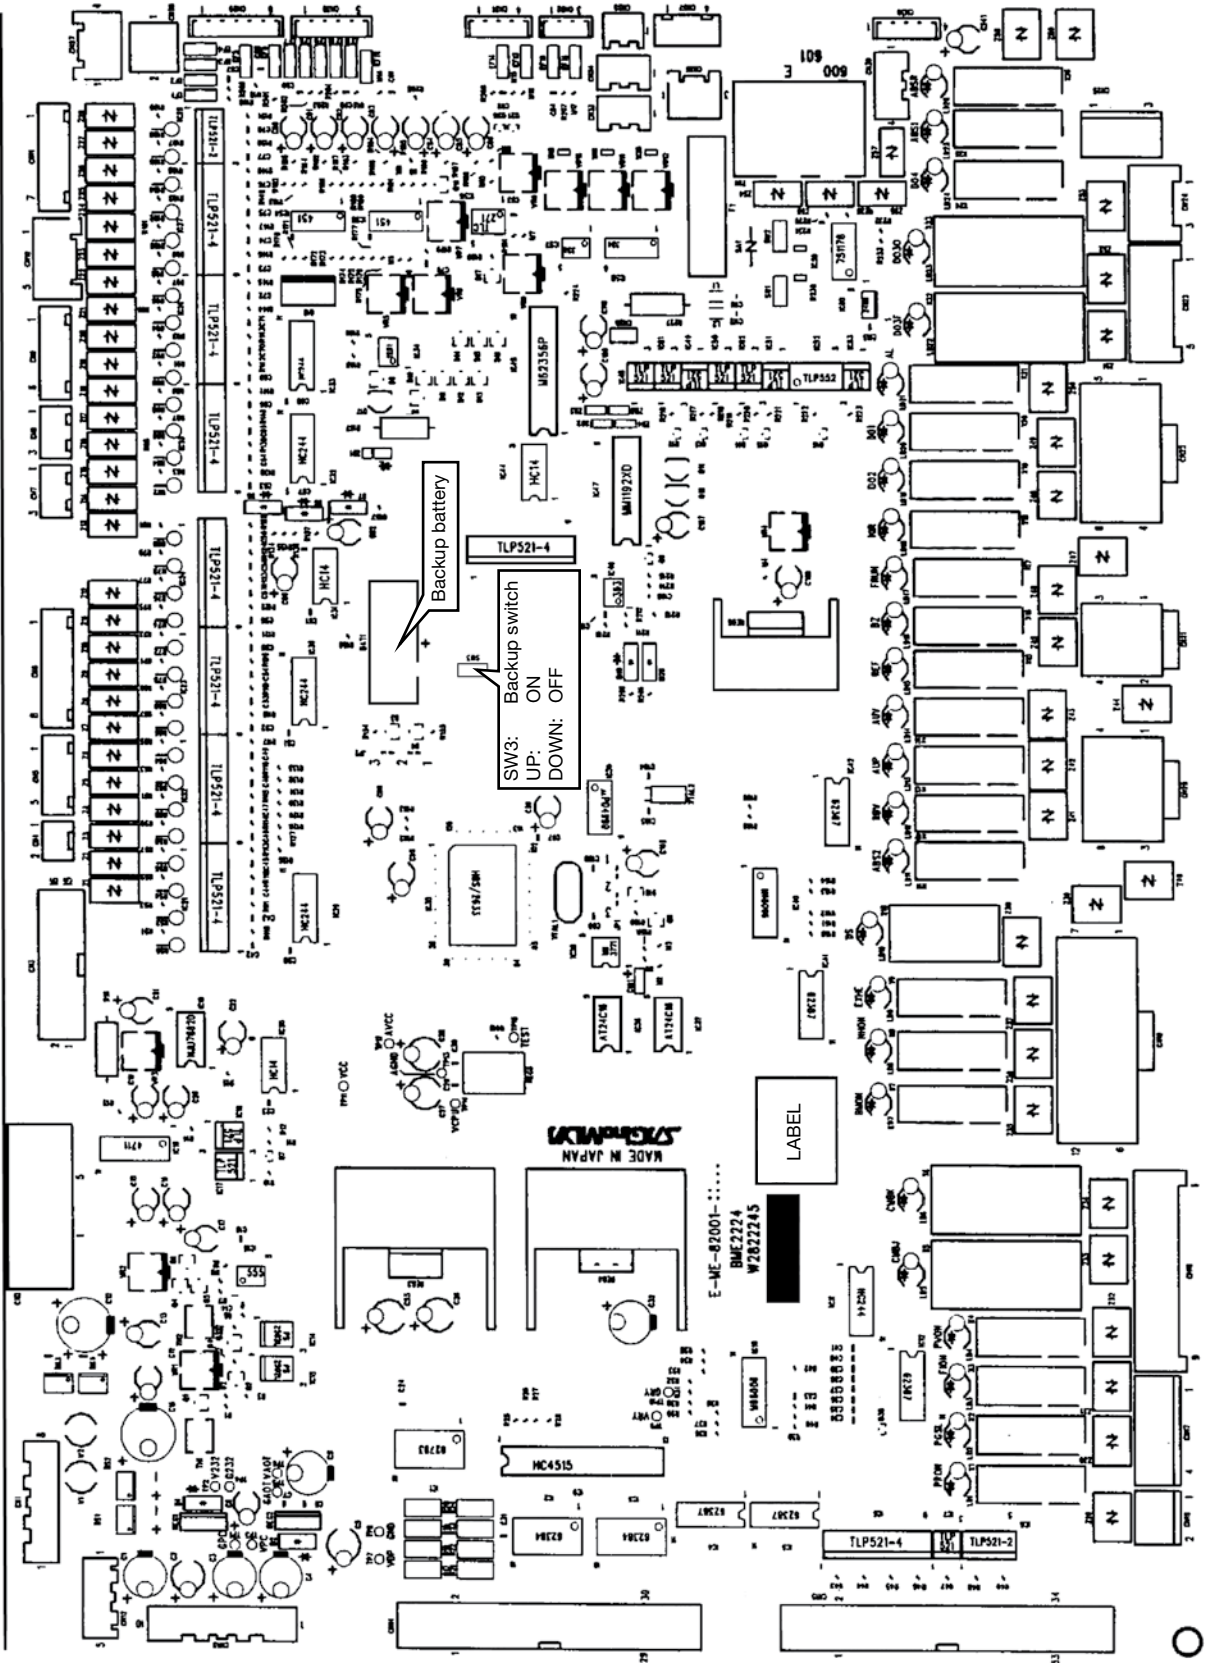

### 3.3.3 - How to change the temperature unit

The temperature unit can be changed as follows, even while the chiller is operating.


**Fig. 19 - Display example**

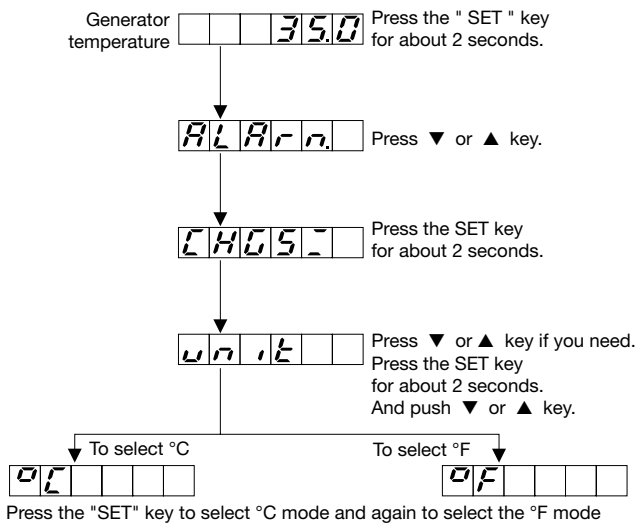

### 3.3.4 - Changing remote signal setting (continuous, pulse etc.)

After wiring of the remote signal, the control board shown below should be set. Refer to field wiring diagram.

**Fig. 20 - Display example**

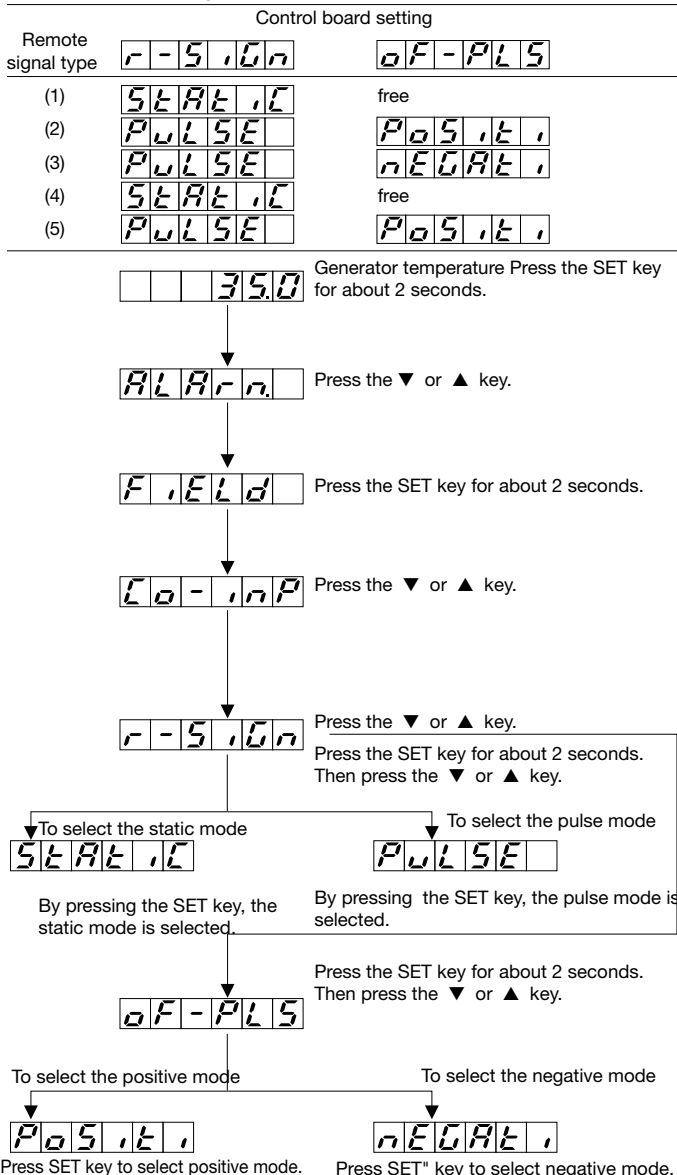

### 3.4 - Cooling operation

#### 3.4.1 - Pre-operation checks

Please check the following items before starting operation:


- Check the setpoint of the chilled-water leaving temperature. Make sure that the chilled-water leaving temperature is set as specified. For the indication of the set value, please refer to chapter 3.8.
- Check the steam and steam drain equipment
  - Make a daily inspection (refer to chapter 4).
  - Check that the steam valve(s) is (are) open.

**NOTE:** To start and stop the chilled water pump and cooling water pump, always use the start and stop signal from the chiller control panel. Strictly ensure that the interlock signals from the chilled water pump and the cooling water pump are connected to the chiller control panel.

#### 3.4.2 - Start of operation

Refer to Figure 21.

**Fig. 21 - Control board**

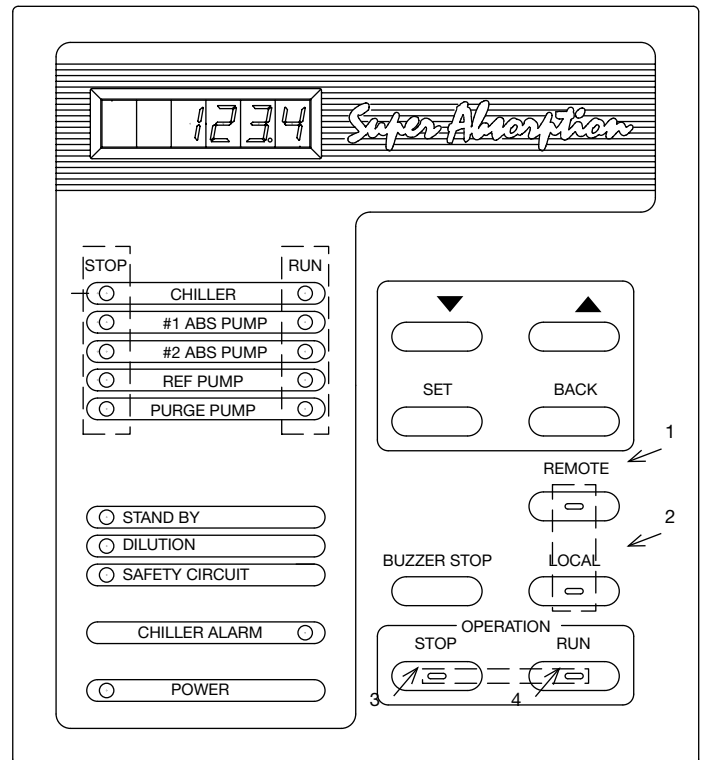

#### Legend

- 1 Remote key
- 2 Local key
- 3 Stop key
- 4 Run key

#### Local operation mode

- Press the "LOCAL" key on the chiller control board. The "LOCAL" indication light of the key is on.
- Keep pressing the "RUN" key for more than a second and make sure that the "RUN" indicator light of the key is on.
- Automatic operation starts.

#### Remote operation mode

- Press the "REMOTE" key on the chiller control board. The "REMOTE" indication light of the key is on.

- Turn on the start switch on the remote control panel for the field supply. The indicator light of the "RUN" key on the chiller control board is on.
- Automatic operation starts.

**NOTE:** In local operation mode the signal from the remote control panel does not work. In remote operation mode the "RUN" key of the chiller control board does not work.

### 3.4.3 - Stop of operation

Refer to Figure 21.

#### Local operation mode

- Keep pressing the "STOP" key on the chiller control board for more than a second.
- Make sure that the "RUN" indication light goes off and the "STOP" indication light comes on.

#### Remote operation mode


- Turn on the stop switch on the field supply remote control panel.
- Another way to stop the chiller is to press the "STOP" key on the chiller control board during remote operation.

**NOTE:** Since the chilled-water pump, cooling water pump, and chiller are interlocked, each pump stops automatically when the chiller stops.

*The air handling unit must be stopped after the chilled-water pump is stopped*

### 3.5 - Changing the information on the data display

Fig. 22 - Control board

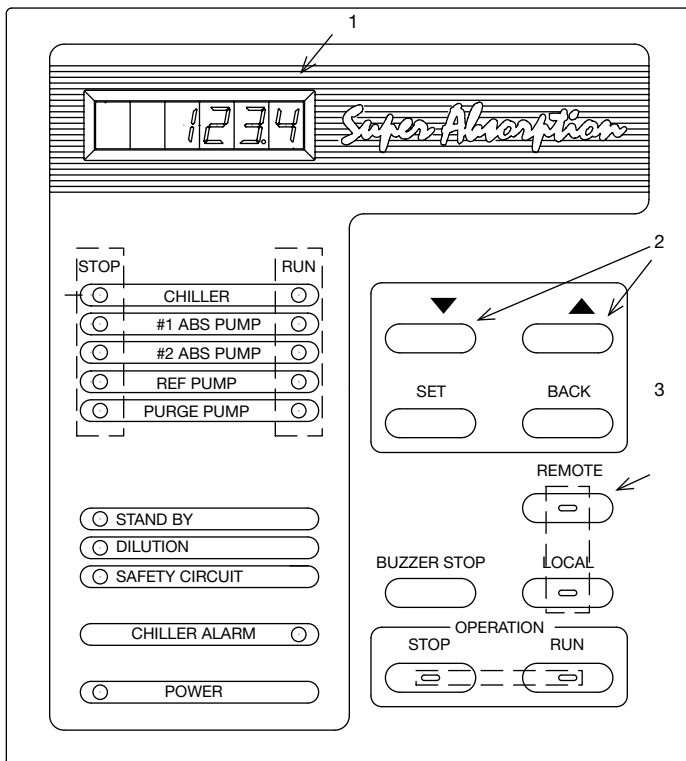

#### Legend

- 1 Data display
- 2 Select key: changes the data display information
- 3 Back select key

### 3.5.1 - Normal display information

The data display on the control board usually shows the generator temperature as follows.

It returns to the generator temperature display when no key is pressed for 1 minute.

### 3.5.2 - Changing the display

Refer to Figure 22.

If you press the ▲ key, the information on data display changes in the correct order, and pressing the ▼ key, it changes in reverse order.

If you press the ▲ key again when the last information is shown, the display returns to the normal display information.

### 3.5.3 - Typical display order

Real-time data is shown in the data display (7-segment LED and 6 figures). The display shows a data code (content distinction by code number) and various operating times, on/off time, component temperatures, chilled-water temperature setpoints and alarm codes. A data code is sent in turn from the ▲ ▼ keys and displayed. An alarm code is only shown when one or several abnormalities occur. The alarm code is shown in order of importance, and a dotted "." is shown under the number to the right of the alarm code. When several faults occur, use the ▲ ▼ keys to display the additional alarm codes. If no key including the "BACK" key is pressed for 1 minute, the display returns to the generator temperature display.

Fig. 23 - Typical display order

Data code	Data name	Display	Means
-	Generator temperature	135.0°C	135.0°C
1.	Chiller operating hours	1234	1234 hours
2.	Absorbent pump 1 operating hours	1111	1111 hours
3.	Absorbent pump 2 operating hours	1230	1230 hours
4.	Combustion hours		Not used
5.	Refrigerant pump operating hours	1201	1201 hours
6.	Purge pump operating hours	107	107 hours
7.	Chiller on/off times	123	123 times
8.	Absorbent pump 1 on/off times	169	169 times
9.	Absorbent pump 2 on/off times	123	123 times
A.	Combustion on/off times		Not used
B.	Refrigerant pump on/off times	138	138 times
C.	Purge pump on/off times	51	51 times
10.	Chilled-water temperature setpoint	7.0°C	7.0°C
11.	Hot-water temperature setpoint*		Not used
12.	Chilled-water entering temperature	11.9°C	11.9°C
13.	Chilled-water leaving temperature	6.8°C	6.8°C
14.	Cooling water entering temperature	31.8°C	31.8°C
15.	Condenser temperature	34.7°C	34.7°C
16.	Steam drain/exhaust gas temperature	211.7°C	211.7°C
17.	Purge tank pressure	8.5 kPa	8.5 kPa
-	Generator temperature	135.0°C	135.0°C


\* Hot-water reference is not applicable to 16NK units

### 3.6 - Changing display and setpoint

#### Setpoint display change

Select the current setpoint temperature and change it as follows.

To change the chilled-water temperature:

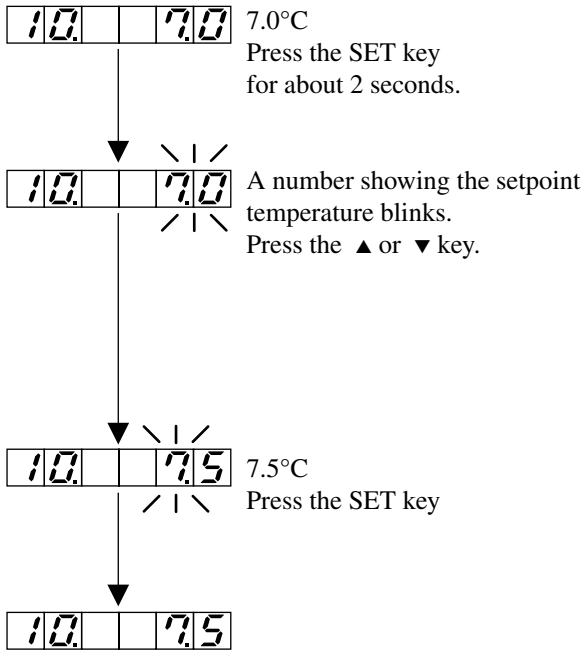

The setpoint change has been made.

If no key including the "BACK" key is pressed for 1 minute, the display returns to the generator temperature.

#### NOTES:

1. *Incorrect setting may cause chiller failure. If you need to change the setpoint, always consult your Carrier service agent.*
2. *Setpoints become effective as soon as they have been changed. Be careful when changing setpoints during operation.*

### 3.7 - Maintenance message

If a problem that could affect the efficient operation of the chiller is predicted, a warning message is given. This includes a comment on the data display as shown in Figure 18.

Fig. 24 - Maintenance message

Data code	Data name	Display	Means
H-01*	Operate purge pump	H-01 1	Operate purge pump.
H-03*	Clean cooling water tubes	H-03 3	Fouling of cooling water tubes.
H-04*	Check cooling water system	H-04 4	Check cooling water pump, cooling tower, etc.
H-06**	Purge tank high pressure	H-06 6	Purge tank pressure is high.
H-07**	Cooling water tubes foul	H-07 7	Fouling of cooling water tubes.
H-08**	Cooling water high temperature	H-08 8	Cooling water temperature is high.
H-10	Power failure	H-10 10	There was a power failure while the chiller was operating

#### Legend

- \* When this appears, immediate action is required.
- \*\* When this appears, no immediate action is required, but as this might lead to a higher code, attention should be paid. Consult Carrier service personnel at the next periodic maintenance.

**NOTE:** These displays disappear when the problem has been corrected.

Fig. 25 - Maintenance message descriptions and actions required

Maintenance message	Display	Action
1 Cooling water tubes foul	H-07 7 H-03 3	Cooling water tubes must be cleaned. Contact Carrier service agent to do the job
2 Vacuum rate	H-06 6 H-01 1	The purge tank must be purged immediately. If this message is shown frequently, contact your Carrier service agent.
3 Cooling water high temperature	H-08 8 H-04 4	Check the cooling water pump, cooling tower, etc.
4 Power failure	H-10 10	See section 3.8.5.

### 3.8 - Alarm messages and actions required


#### 3.8.1 - How they are shown

When an alarm is detected, the alarm buzzer sounds, and the alarm message is shown on the data display. At the same time, the indication light of the "STOP" key blinks. The chiller stops for safety reasons after the dilution cycle. Depending on the alarm message it may also stop without carrying out the dilution cycle.


Fig. 26 - Display example

J-0 1 Chilled-water low temperature

An alarm code is only shown when one or several abnormalities occur. If several errors have occurred, the most important one is shown with a dot ".".

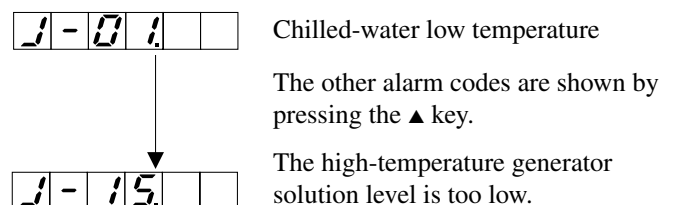

### 3.8.2 - Troubleshooting flowchart

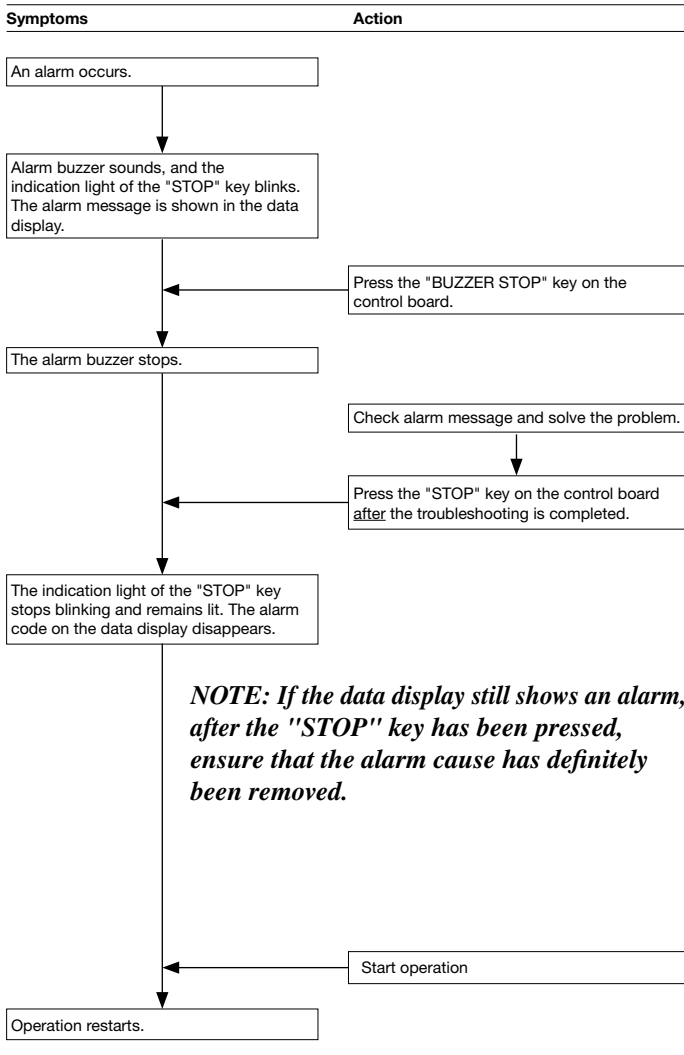


### 3.8.3 - Alarm message and setpoint

**Fig. 27 - List of alarms and setpoints in cooling operation**

Purpose	Display	Alarm message	Setpoint
Protection of chilled water system from freezing	A-1211	Chilled water temperature is too low	2.5°C or below
	A-1221	Chilled water pump interlock alarm	-
	A-1231	Chilled water flow alarm	50% or below
	A-1241	Cooling water temperature is too low	Below monitoring temperature for 30 minutes
Prevention of Crystallisation and Generator protection	A-1251	Cooling water pump interlock alarm	-
	A-1271	Cooling water flow alarm (option)	50 % or below
	A-1131	Generator temperature is too high	162°C or higher for 10 minutes 165°C or higher immediately
	A-1141	Generator pressure is too high	0 MPa or above
	A-1151	High concentration of absorbent	65% twice 65.5% Immediately
	Motor protection	A-1214	Absorbent pump 1 overload alarm
A-1215		Absorbent pump 2 overload alarm	Rated current value or above
A-1121		Refrigerant pump overload alarm	Rated current value or above
A-1122		Purge pump overload alarm	Rated current value or above

### 3.8.4 - Locating and clearing alarm

**Fig. 28 - List of alarm messages and their causes and remedies**

Display and content of alarm	
<b>Alarm of the chilled water and/or cooling water system</b>	
Chilled water temperature is too low. A-1211	Check that the discharge pressure of both chilled-water and cooling water pumps is normal.
Chilled water flow alarm A-1231	
Cooling water temperature is too low A-1241	→ If not, the strainer may be clogged, or there may be an air leak in the piping, etc.
Cooling water flow alarm (option) A-1271	Is the chilled-water setpoint too low?  → Correct it to the specified setpoint.  Is the cooling water setpoint too low?  → Correct it to specified setpoint (e.g. 28°C).
Correct the above causes and restart the chiller. If the "CHILLER ALARM" continues, check the following and contact your Carrier service agent: <ul style="list-style-type: none"> <li>• Entering and leaving chilled-water temperature</li> <li>• Entering and leaving cooling water temperature</li> <li>• Generator temperature and pressure</li> </ul>	
<b>Alarm of the motor(s)</b>	
Absorbent pump 1 overload alarm. A-1214	First check that the reset button(s) of the overload relay connected to the electromagnetic contactor is not pushed in, and then contact your Carrier service agent.
Absorbent pump 2 overload alarm. A-1215	
Refrigerant pump overload alarm A-1121	
 <p>Reset buttons</p>	
<b>Alarm of the auxiliary equipment</b>	
Chilled water pump interlock alarm. A-1221	Check that the chilled-water pump and cooling water pump are rotating.
Cooling water pump interlock alarm. A-1251	→ Start the pumps Check the fan and/or other equipment connected to the system interlock. Correct the above causes and restart the chiller. If the "CHILLER ALARM" continues, contact your Carrier service agent.
<b>Generator alarm</b>	
Generator temperature is too high. A-1131	Check that the cooling water pump is rotating. → Start the pump. Check that the cooling water line valve is open. → Open the valve. Check that the cooling water pump discharge pressure is normal. → If not, the strainer may be clogged, or there may be an air leak in the piping, etc.
Generator pressure is too high. A-1141	
High concentration of absorbent A-1151	Correct the above causes and restart the chiller. If the "CHILLER ALARM" continues, check the following and contact your Carrier service agent: <ul style="list-style-type: none"> <li>• Entering and leaving chilled-water temperature</li> <li>• Entering and leaving cooling water temperature</li> <li>• Generator temperature and pressure.</li> <li>• Is the chilled water setpoint too low?</li> </ul> → Correct it to the specified setpoint. • Water in the heat transfer tubes may be fouled (especially cooling water).



**Sensor alarm**

- F-011** Entering chilled-water temperature sensor alarm.
- F-012** Entering cooling water temperature sensor alarm.
- F-013** Leaving cooling water temperature sensor alarm.
- F-014** Cooling water intermediate temperature sensor alarm.
- F-015** Condenser temperature sensor alarm.
- F-017** Low-temperature generator temperature sensor alarm.
- F-018** Refrigerant temperature sensor alarm (evaporator).
- F-019** Diluted solution temperature sensor alarm (absorber outlet).
- F-025** Leaving chilled-water temperature sensor alarm.
- F-026** Generator temperature sensor alarm.
- F-027** Steam drain temperature sensor failure
- F-028** Purge tank pressure sensor alarm.

Is the sensor short-circuited?  
 → Check all chiller sensors and contact your Carrier service agent.

**NOTE: The chiller automatically stops for safety reasons when either the generator temperature or the chilled-water temperature sensor has an alarm. It does not stop when other sensors have an alarm, but this could cause control failure. Please contact your Carrier service agent as soon as possible.**

**Actions to be taken if a power failure occurs**

If a power failure occurs, the chiller stops completely without carrying out a dilution cycle. Special attention should be paid to the following.

**Actions required when a power failure occurs**

Operation condition at power failure	Action
Occurred during cooling operation, and power did not return for over an hour	Immediately contact your Carrier service agent. Do not restart operation.
Occurred during cooling operation, and power returned in less than an hour	Contact Carrier service agent after restarting operation.
Occurred during purging operation	Immediately close the purge valve completely and turn the purge pump switch on the control panel off. After the power is restored, restart purging, and consult your Carrier service agent.

**4 - MAINTENANCE**

**4.1 - Daily maintenance**

**4.1.1 - Inspection of each chiller component**

If you find an abnormal condition, contact your Carrier service agent:

- Oil leak around the chiller
- Abnormal noise of absorbent pump and refrigerant pump

For the following items please consult the system manufacturer:

- Cleaning of cooling tower and cooling water line strainer
- Check the condition of the cooling tower
- Check for air leaks in the piping


**4.1.2 - Operation data record**

Please record the operation data regularly, as this is useful for troubleshooting and alarm prevention. Show the record to the Carrier service personnel when they visit you for the service or the periodic inspection.

On the next page you will find a sample of the operation data sheet.

**3.8.5 - Action in case of a power failure**

**Flowchart of actions in case of a power failure**

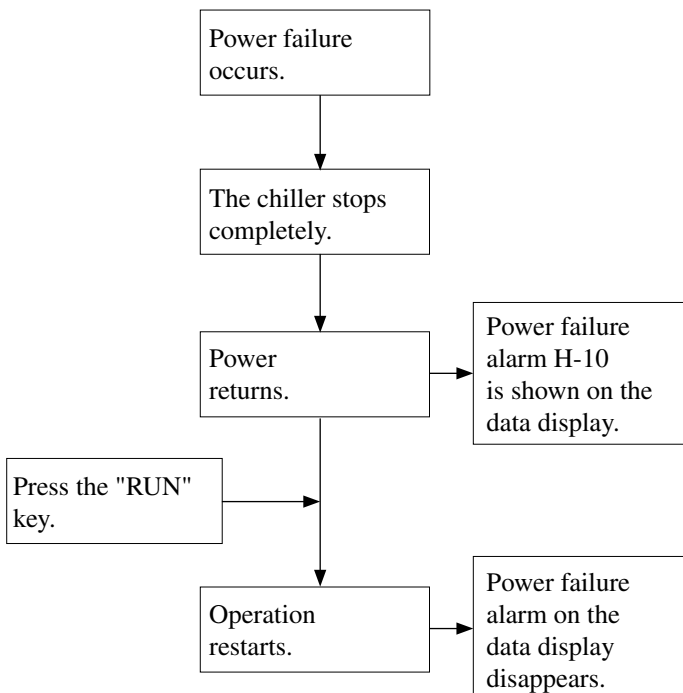

## TEST OPERATION DATA SHEET

Trial run data sheet

1/2

Project name : \_\_\_\_\_  
 chiller model : 16NK- \_\_\_\_\_  
 Serial number : \_\_\_\_\_  
 Accepted by : \_\_\_\_\_ Date \_\_\_\_\_  
 Reviewed by : \_\_\_\_\_ Date \_\_\_\_\_  
 Recorded by : \_\_\_\_\_ Date \_\_\_\_\_

Unit model/serial No.		Operator:		Date: / /		
No.	Data items	Unit	Spec.	DATA-1 Time:	DATA-2 Time:	DATA-3 Time:
1	Ambient temperature	°C/°F				
2	Room temperature	°C/°F				
3	Chilled-water entering temperature	°C/°F				
4	Chilled-water leaving temperature	°C/°F				
5	Chilled-water entering pressure	kPa/psi				
6	Chilled-water leaving pressure	kPa/psi				
7	Evaporator pressure drop	kPa/psi				
8	Chilled water flow rate	l/s/gpm				
9	Cooling capacity	kW				
10		USRT				
11	Cooling water entering temperature	°C/°F				
12	Cooling water leaving temperature	°C/°F				
13	Cooling water entering pressure	kPa/psi				
14	Cooling water leaving pressure	kPa/psi				
15	Pressure drop in absorber & condenser	kPa/psi				
16	Cooling water flow rate	l/s/gpm				
17	High-temperature generator pressure	MPa/psi				
18	High-temperature generator temperature	°C/°F				
19	Solution level in high-temperature generator	n/60 mm				
20	Inverter frequency	Hz				
21	Operating current of absorbent pump 1	A				
22	Operating current of absorbent pump 2	A				
23	Operating current of refrigerant pump	A				
24	Operating current of purge pump	A				
25	Evaporator solution level	n/60 mm n/2-3/8"				
26	Purge tank pressure	kPa				
27	Opening degree of dilution solution damper	n/90				
28	Opening degree of intermediate solution damper	n/90				
29	Opening degree of concentrated solution damper	n/90				
30	Steam consumption	kg/h / lb/h				
31	Supply steam pressure	kPa/psi				
32	Supply steam temperature	°C/°F				



## 4.2 - Periodic maintenance

To optimize performance, the chiller requires purging, refrigerant blow down, absorbent control, and management of combustion equipment (16DJ), etc. We recommend that you arrange a maintenance contract with your Carrier service agent.

### 4.2.1 - Purging (Fig. 30)


Non-condensable gas inside the machine not only decreases cooling capacity, but also potentially shortens the life of the machine. Therefore purging must be done periodically. This should be done by the Carrier service personnel under the maintenance contract. If customers carry out the purging themselves, they should take instruction from our service personnel.

#### Purging procedure

When the purge indication light on the control panel comes on, start purging, following the instructions below.

1. Turn on the purge pump on/off switch on the control panel and operate the purge pump for 10 minutes.
2. Open V1 and V2.
3. Press the ▲ key on the control board once to show data code 17 "Purge tank pressure" (refer to chapter 3.5.3) and check if the indicated value drops. If it does not drop, follow the procedure described in steps 5, 6 and 7 below, and contact your Carrier service agent.
4. Purge for 10 minutes. Even if the purge indication light goes off before 10 minutes have elapsed, continue purging for the full 10 minutes. If the light does not go off, continue purging until it does.
5. Close V1 and V2.
6. Turn off the purge pump on/off switch.
7. Check whether the valves are open/closed.
 


V1	Closed
V2	Closed
V3	Closed
B-valve	Open

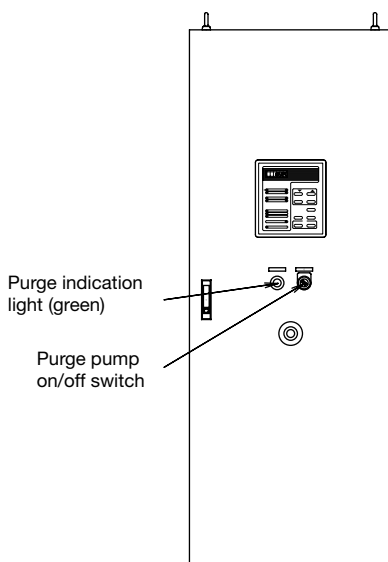

### 4.2.2 - Refrigerant blow down

During cooling operation a small quantity of absorbent can mix with the refrigerant. This amount can increase over time and result in a reduced cooling capacity. Therefore refrigerant blow-down must be performed once during the cooling season. By doing this the dirty refrigerant is transferred to the absorber side and new, clean refrigerant is regenerated.


Fig. 29

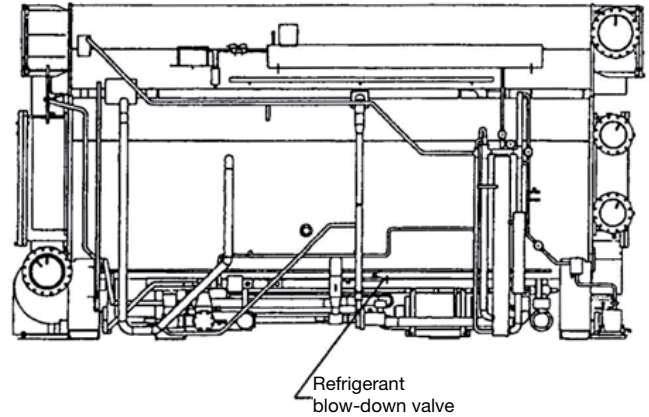

- Make sure the refrigerant pump is rotating and that the solution level is visible through the evaporator sight glass.
- Open the transfer valve completely.
- When the solution level is no longer visible, close the transfer valve tightly.

The above blow-down procedure should be repeated a few times, as necessary. We recommend that you arrange a maintenance contract with your Carrier service agent which will include refrigerant blow-down.

Fig. 30

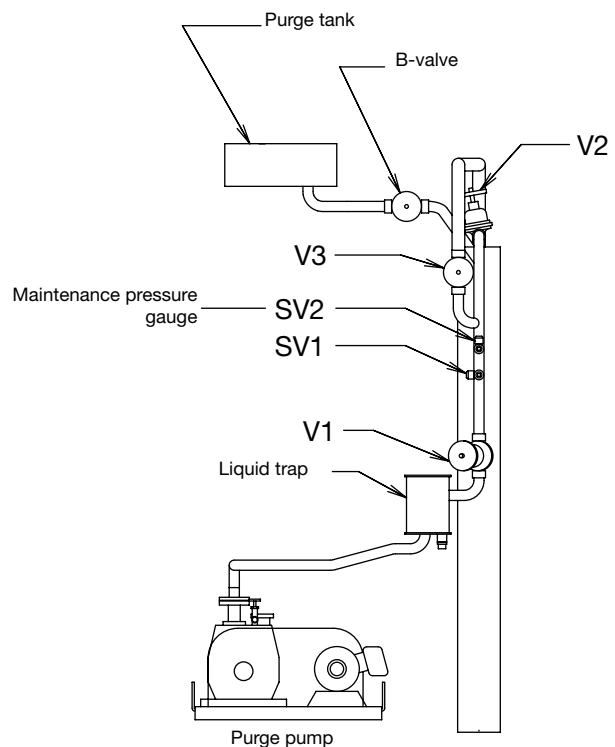

### 4.3 - Recommended maintenance and main component replacement schedule

#### Standard controls

Component	Type	Area inspection		Inspection		Interval	Remarks
		Vacuum area	Non-vacuum area	Item	Method		
Main shell	Chilled-water line pipes	X		Corrosion of the heat transfer tube surface	Visual inspection	As necessary	Random inspection from the bundle (no vacuum destruction)
			X	Corrosion of the internal surface of the heat transfer tube scale and/or slime adhesion	Eddy-current test/endoscope/visual inspection	Once a year	Idem above
	Cooling water line pipes	X		Corrosion of the heat transfer tube surface	Visual inspection	As necessary	Idem above
			X	Corrosion of the heat transfer tube surface. Scale and/or slime adhesion	Eddy-current test/endoscope/visual inspection	Once a year	Idem above
Heat exchanger tube	X			Corrosion of the heat transfer tube surface. Reduced metal by abrasion scale and/or slime adhesion	Overhaul	As necessary	Idem above
			X	Check the inside fouling	Visual inspection etc.	Once a year	Cleaning
Solution	Absorbent	(X)		Solution analysis Concentration	Solution random inspection	Two to four times per year	To be adjusted to the standard controls
				Alkalinity Inhibitor ratio Copper dissolution ratio Iron dissolution ratio			
Pump	Absorbent pump	X		Pump body, impeller, bearing, motor	Overhaul	As necessary	Inspection interval 20000 hours or more
	Refrigerant pump	X		Pump body, impeller, bearing, motor	Overhaul	As necessary	Idem above
	Purge pump	(X)		Pump body	Overhaul	As necessary	-
Safety device	Pressure switch	(X)		V-belt	Periodic replacement	As necessary	-
	Flow switch	(X)		Periodic replacement (because of safety device)		Every 3 years	Generator pressure switch for 16DJ
Control device	Temperature sensor		X	Periodic inspection with a maintenance contract		As necessary	-
	Electro-magnetic contactor		X	Periodic inspection with a maintenance contract		As necessary	-
	Relay		X				-
	Inverter		X				-
Others	Sight glass	X		Idem above		Once a year	Option
	Diaphragm valve packing	X		Periodic replacement ((in order to avoid leakage)		Every 3 years	-
	Other packing		X			Every 3 years	-
	Palladium cell	X				Every 3 years	-
	Water-line packing		X	Periodic inspection with a maintenance contract.		Every 3 years	-

## 4.4 - Water treatment

Water treatment is very important for the chiller. As this requires specialised technical knowledge, please consult your Carrier service agent.

### 4.4.1 - Water treatment for chilled water and cooling water

The cooling water temperature in an open-type recycling cooling tower is decreased using vaporized latent heat, and the cooling water is reused. At this time, the water is evaporated, and the concentration of the remaining dissolved salts increases. This means that the water quality will gradually deteriorate.

As the water and air are always in contact with each other in the cooling tower, the sulfurous acid gas, dust, sand, etc. in the atmosphere will mix with the water, further degrading the water quality.

These factors cause problems in the cooling water system, such as corrosion, scale and slime.

### Water quality standard

The water quality standard is shown in the example in Figure 25. This is an extract from JRA-GL 02-1994.

#### NOTES:

1. *If any item deviates from the standard values it may cause failure due to corrosion or scale. Therefore the water quality should be checked periodically.*
2. *The water quality range that can be used after chemical treatment is not given here, as the range depends on the chemicals used. The appropriate water quality values should be set together with a water processing specialist and be checked periodically.*


### Typical water treatment

Even if the make-up water for the cooling water complies with water standards, the water quality will deteriorate due to its concentration. Therefore the following water treatment is necessary. Depending on the degree of deterioration, chilled-water also requires this treatment.

If a concrete heat storage tank is used, special attention should be paid to water treatment.

- Regular manual blow-down of the tower sump water
  - Automatic blow-down by measuring electric conductance
  - Addition of the anti-corrosion inhibitor
  - Slime control
  - Periodic water analysis
- Service the water header periodically, check the heat transfer tube and clean it as necessary.

Fig. 31 - Example of the effect of tube fouling

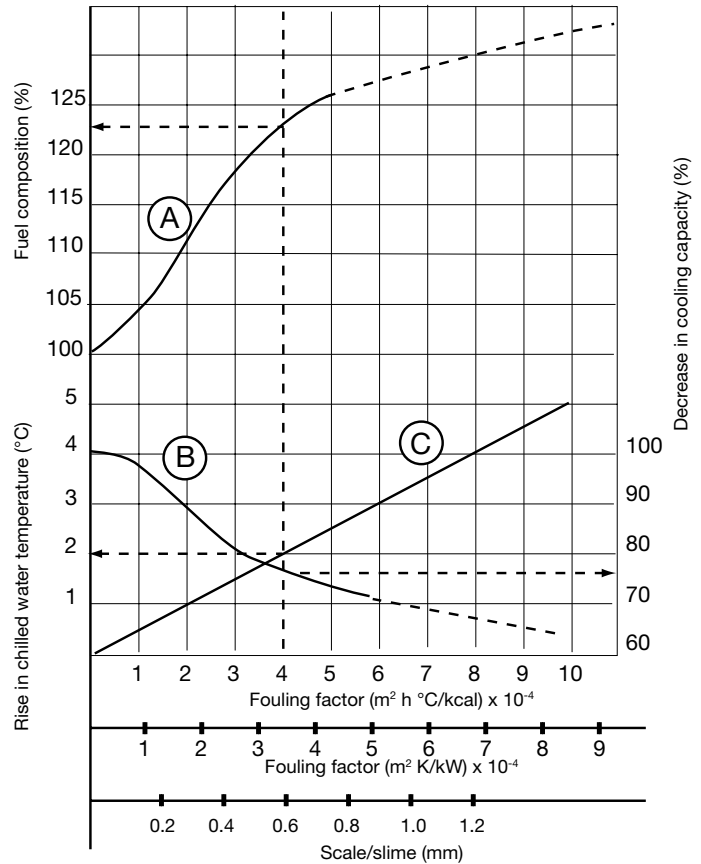

For example, if 0.6 mm of scale clings to the tubes, the cooling capacity drops to 76%, the chilled-water temperature rises by 2°C and fuel consumption rises by 23%.

- A Increase in fuel consumption (for constant cooling capacity, ratio at rated fuel consumption)
- B Decrease in cooling capacity (for constant chilled water temperature)
- C Increase in chilled water temperature (for constant cooling capacity)

**Fig. 32 - Water quality standard values for cooling water, chilled water, mid-range temperature water and make-up water\*\***

	Cooling water systems****			Chilled water systems		Mid-range temperature (20-90°C) water systems***				Tendency**		
						Lower mid-range temperature water system		Higher mid-range temperature water system***			Corrosive	Scale-forming
	Recirculating water	Make-up water	Once through water	Recirculating water (T 20°C)	Make-up water	Recirculating water (20<T<=60°C)	Make-up water	Recirculating water (60<T<=90°C)	Make-up water			
Standard items (see footnotes)												
pH (25°C)	6.5 - 8.2	6.0 - 8.0	6.8 - 8.0	6.8 - 8.0	6.8 - 8.0	7.0 - 8.0	7.0 - 8.0	7.0 - 8.0	7.0 - 8.0	7.0 - 8.0	X	X
Electrical conductivity (25°C)	<= 80	<= 30	<= 40	<= 40	<= 30	<= 30	<= 30	<= 30	<= 30	<= 30	X	X
	<= 800	<= 300	<= 400	<= 400	<= 300	<= 300	<= 300	<= 300	<= 300	<= 300		
Chloride ion	<= 200	<= 50	<= 50	<= 50	<= 50	<= 50	<= 50	<= 50	<= 50	<= 50	X	X
Sulfate ion	<= 200	<= 50	<= 50	<= 50	<= 50	<= 50	<= 50	<= 50	<= 50	<= 50	X	X
Acid consumption (pH 4.8)	<= 100	<= 50	<= 50	<= 50	<= 50	<= 50	<= 50	<= 50	<= 50	<= 50		X
Total hardness	<= 200	<= 70	<= 70	<= 70	<= 70	<= 70	<= 70	<= 70	<= 70	<= 70		X
Calcium hardness	<= 150	<= 50	<= 50	<= 50	<= 50	<= 50	<= 50	<= 50	<= 50	<= 50		X
Ionic silica	<= 50	<= 30	<= 30	<= 30	<= 30	<= 30	<= 30	<= 30	<= 30	<= 30		X
Reference items (see footnotes)												X
Iron	<= 1.0	<= 0.3	<= 1.0	<= 1.0	<= 0.3	<= 1.0	<= 0.3	<= 1.0	<= 1.0	<= 0.3	X	X
Copper	<= 0.3	<= 0.1	<= 1.0	<= 1.0	<= 0.1	<= 1.0	<= 0.1	<= 1.0	<= 1.0	<= 0.1	X	X
Sulfide ion	Not detected			Not detected		Not detected					X	X
Ammonium ion	<= 1.0	<= 1.0	<= 1.0	<= 1.0	<= 0.1	<= 0.3	<= 0.1	<= 0.1	<= 0.1	<= 0.1	X	X
Residual chlorine	<= 0.3	<= 0.3	<= 0.3	<= 0.3	<= 0.3	<= 0.25	<= 0.3	<= 0.1	<= 0.1	<= 0.3	X	X
Free carbone dioxide	<= 4.0	<= 4.0	<= 4.0	<= 4.0	<= 4.0	<= 0.4	<= 4.0	<= 0.4	<= 0.4	<= 4.0	X	X
Pyzner stability index	6.0 - 7.0	-	-	-	-	-	-	-	-	-	X	X

**NOTES**

- \* The nomenclature of items, definition of terms and units shall comply with the JIS K 0101. The units and values in ( ) are conventional ones put here for reference.
- \*\* The mark X indicates factors affecting the corrosive or scale-forming tendency.
- \*\*\* When temperature is high (above 40°C), corrosiveness generally increases. Especially, when iron/steel surface has no protective film and is in direct contact with water, it is desirable to take adequate countermeasures against corrosion, such as addition of corrosion inhibitor and deaeration treatment
- \*\*\*\* For the cooling water system using a closed-type cooling tower, the water quality standard for the mid-range temperature water system shall be applied to the closed-circuit recirculating/spray water and its make-up water, while the water quality standard for the recirculating cooling water system shall be applied to the spray water and its make-up water, respectively.
- ++ City water, industrial water and ground water shall be used as source water, and demineralized water, reclaimed water, softened water, etc. shall be excluded.
- +++ The 15 items listed above show typical factors of corrosion and scale problems.

#### 4.4.2. Water treatment for long-term shut-down

Perform the following procedure during long-term shut-down when no chilled-water or cooling water circulates in the chiller. Please consult your Carrier service agent for the details.

##### **Cooling water**

*The usual system is a wet system with the cooling water kept in the chiller. If the cooling water is likely to freeze, drain it from the chiller (dry system). The valve operation is different between wet and dry systems.*

##### **Long-term shut-down (wet system)**

- Drain the cooling water from its discharge port on the cooling water outlet.
- Add anti-corrosion inhibitor to the water. Check the holding water quantity and decide the inhibitor quantity so that the ratio is appropriate.
- Charge the chiller with cooling water.
- Operate the cooling water pump until the inhibitor is evenly mixed.
- Close the cooling water line inlet and outlet isolation valves.

##### **Dry system**

Before draining the cooling water from the chiller, clean the inside of the tubes and provide a corrosion protection covering.

- Drain the cooling water from its discharge port on the cooling water inlet.
- Remove the scale and/or slime from the tubes with a brush. If scale and/or slime cannot be removed with a brush use chemical cleaning.
- After sufficient cleaning, add anti-corrosion inhibitor to the water, and circulate the water with the inhibitor for 30 minutes or more. The inhibitor concentration should be even.
- Drain the water from the discharge port on the cooling water inlet.
- Keep the discharge port open during shut-down.

##### **Chilled water**

*The usual system is a wet system with the chilled water kept in the chiller.*

#### 4.4.3 - Winter season

If the ambient temperature of the chiller is likely to be below 0°C in winter, freeze protection is necessary. Consult your Carrier service agent for the details.

## 5 - TROUBLESHOOTING

For identifying and eliminating the causes of machine failure, please refer to the following chapters:


3.7 - Maintenance message

3.8 - Alarm indication and actions

Appendix 1 - Flowchart (at the end of this document)



Fig. 33

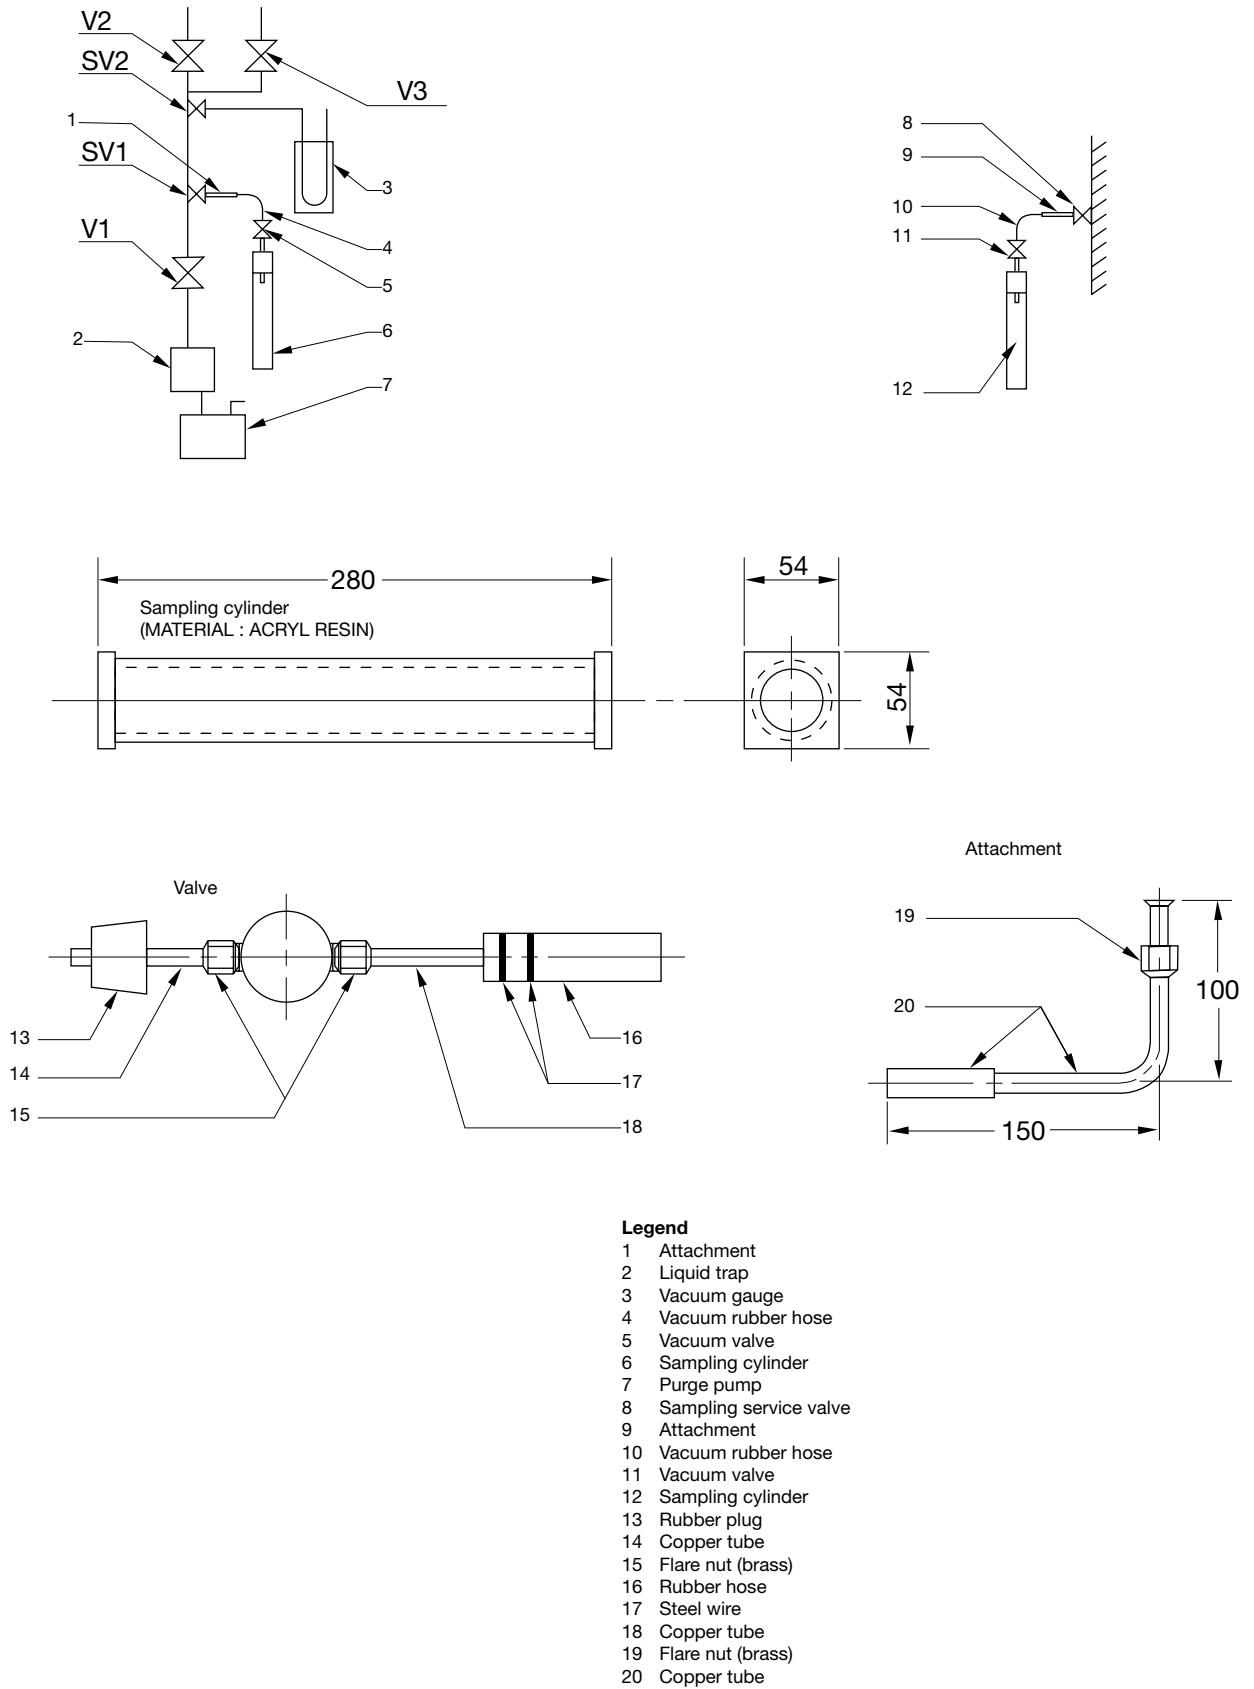

## 6 - INSTRUCTIONS

### 6.1 - Absorbent sampling method

This instruction describes the procedure for sampling a small amount of the absorbent.

#### 6.1.1. Equipment to use

- Sampling cylinder and attachments for service valve
- Vacuum rubber hose
- Pliers
- Vacuum gauge (0-1 kPa)

#### 6.1.2 - Precautions

- Because of the high vacuum condition inside the chiller, ensure that air never leaks into the chiller during this work.
- Handle the vacuum valve carefully so as not to damage it.
- Solution (absorbent and refrigerant) is sampled at SV5, SV6 and SV3 in the same manner.
- Pour the sampled solution into a container.

Refer to figure 8.

#### 6.1.3 - Procedure

- Confirm that manual purge valves (V1, V2 and V3) are closed.
- Remove the flare nut and the bonnet of SV1, and connect the attachment to the service valve.
- Connect the vacuum gauge to SV2 and open SV2.
- Remove the flare nut and the bonnet of SV4 when absorbent is sampled, and connect the attachment to the sampling service valve.
- Connect the vacuum rubber hose and the sampling cylinder to the attachment as shown in Figure 33.
- Run the purge pump and open up V1.
- Open SV1 and the vacuum valve.
- Once the vacuum gauge shows about 0.5 kPa, close the vacuum valve.
- Close SV1 and V1.
- Remove the vacuum rubber hose from SV1, and connect it to the attachment connected to SV4, as shown in Figure 33.
- Open the vacuum valve.
- Open SV4.
- When the sampling cylinder is filled with absorbent, close SV4.
- Close the vacuum valve and remove the vacuum rubber hose from the attachment on SV4.
- Upon completion of this work, remove the attachment, and replace the bonnets and flare nut. Also replace the caps of both service valves after checking their packing.
- Stop the purge pump.
- Finally, wash all tools with water.

### 6.2 - Concentration measurement method

This is the procedure used to measure the absorbent and refrigerant concentration.

#### 6.2.1 - Equipment to use

- Sampling cylinder  
Scale: 1.0-1.2 (for refrigerant)  
Scale: 1.4-1.6 (for diluted absorbent)  
Scale: 1.6-1.8 (for diluted, intermediate and concentrated absorbent)
- Thermometer

#### 6.2.2 - Precautions

- Take care not to damage the gravimeter and thermometer.
- Be careful not to spill any solution. Do not fill the sampling cylinder more than about 80%.
- Perform this measurement quickly.

#### 6.2.3 - Procedure

- Fill the sampling cylinder to about 80% with the solution to be measured.
- Keep the sampling cylinder vertical, and insert the gravimeter into it.
- When the gravimeter stops moving up and down, read its scale which shows the gravity of the solution.
- Remove the gravimeter and put it aside. Then insert the thermometer into the sampling cylinder and stir the solution thoroughly.
- When the temperature stabilizes, read the scale on the thermometer.
- Remove the thermometer and put it aside.
- Store the solution in another bottle.
- Using the concentration diagram of the lithium bromide solution, read the concentration.
- Upon completion of the measurement, wash the gravimeters, thermometer and sampling cylinder with water, and store them so that they are not damaged.

#### Example:

The horizontal axis represents temperature and the vertical axis represents relative density. The lines going down from left to right represent the fixed concentrations.

For example, if the relative density is 1.77 and the temperature is 45°C, the concentration given by the point of intersection of the lines projected from these values will be 63%, as shown in Figure 34 below.


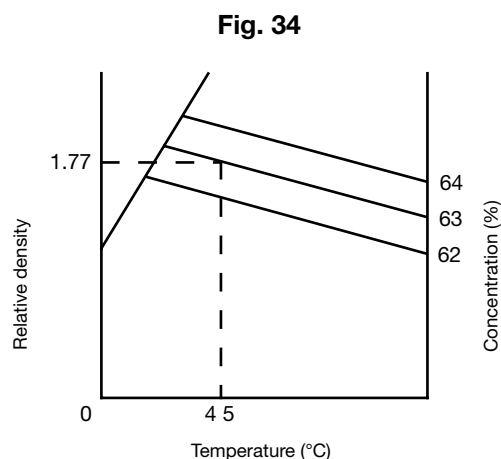


Fig. 35 - Concentration vs temperature vs relative density

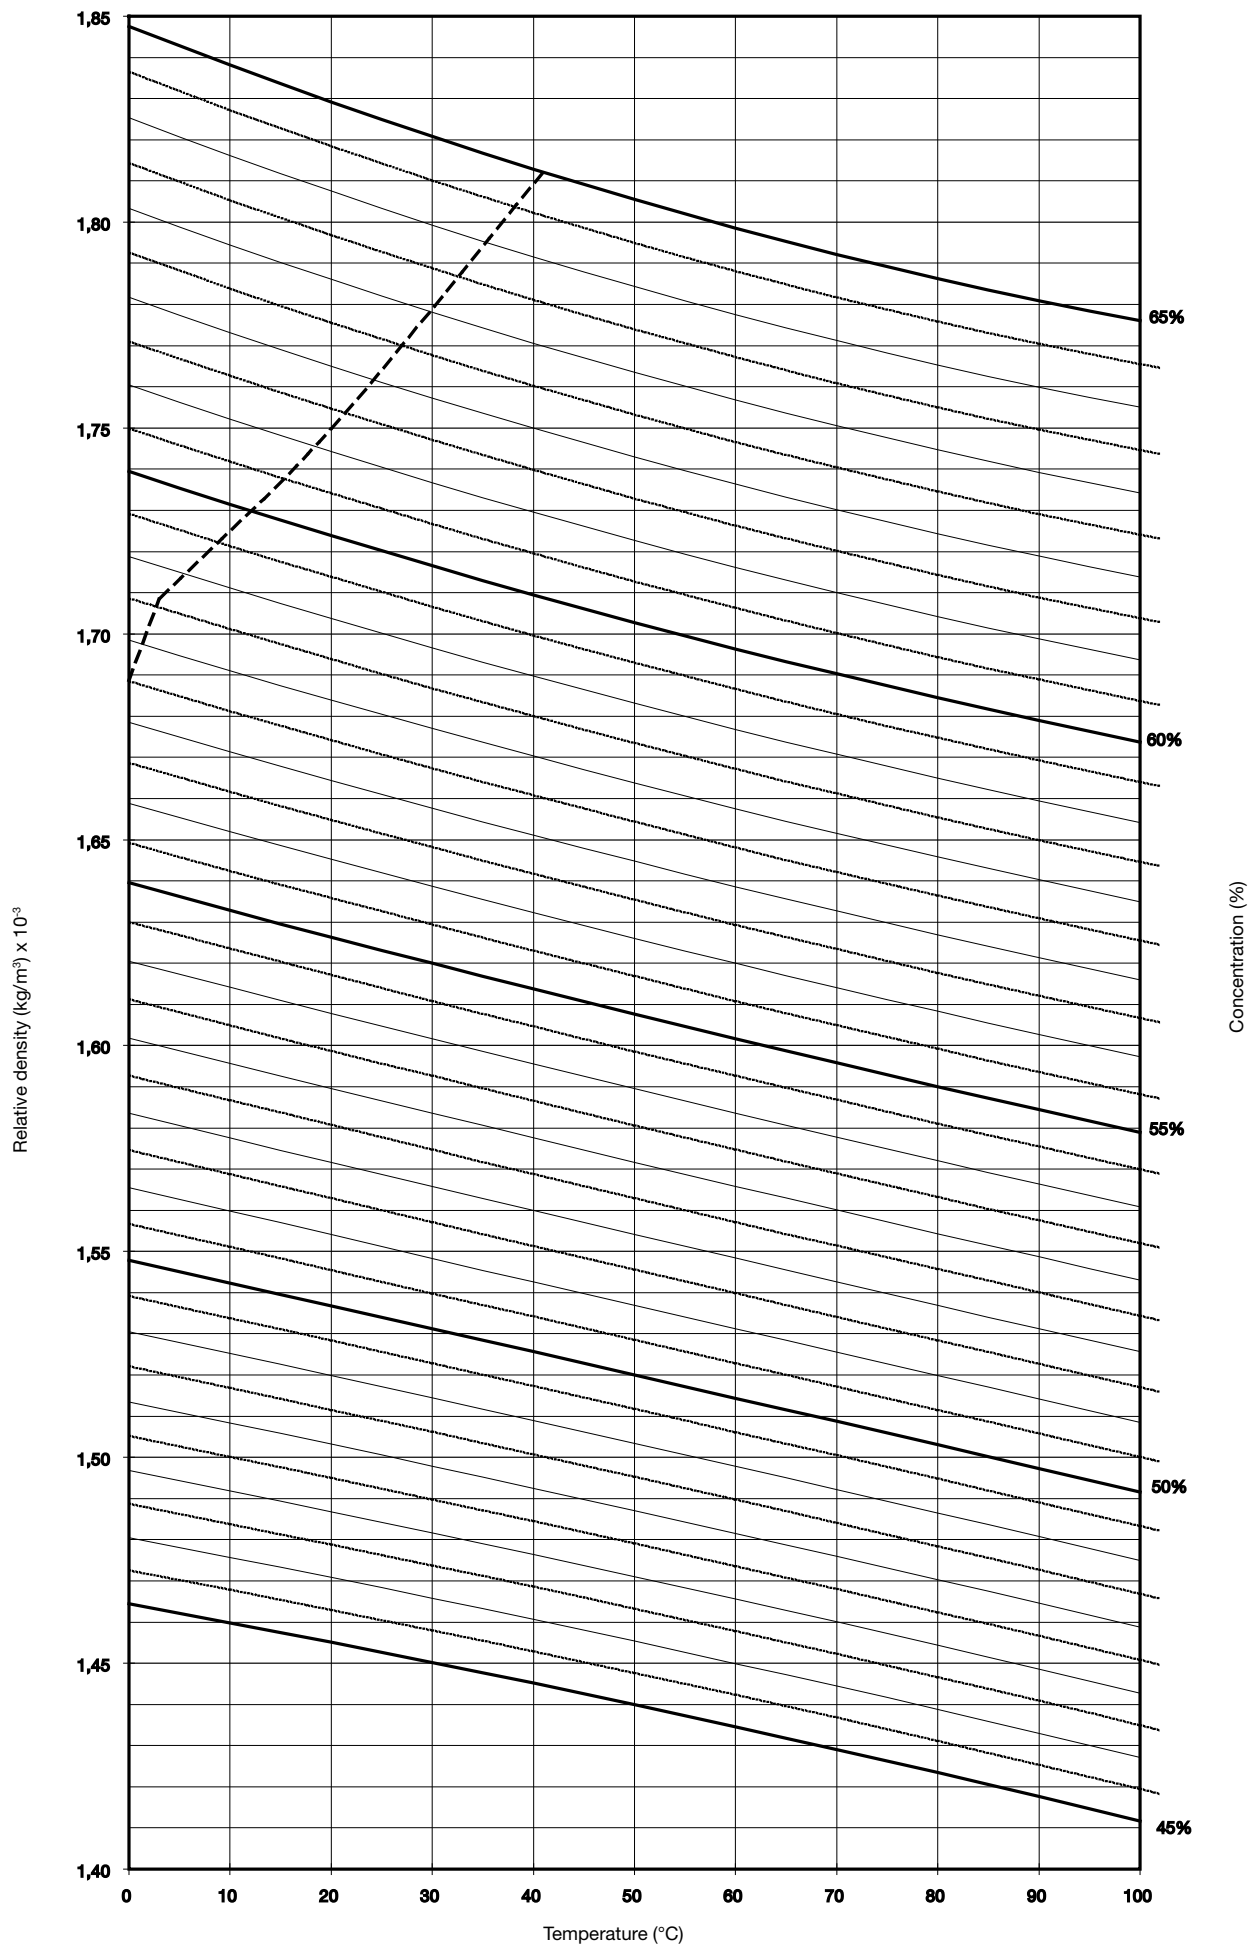

## 7 - MAINTENANCE CONTRACT

To enjoy safe and efficient operation of the chiller for a long time, daily maintenance and periodic inspection are essential. The main items are as follows:

- Verification of the function of safety devices and their adjustment
- Checking the operating conditions and recording the data

These procedures require special tools and a special skills.

We offer an annual maintenance contract to users of the chiller. Under the contract we provide trained service personnel that will perform the periodic diagnosis and adjustment of the chiller, using the latest technology. Consult your Carrier service agent for details.

### 7.1 - Annual maintenance contract

We offer an annual maintenance contract to our customers with periodic inspection and maintenance of the Carrier absorption chiller. Under this contract your Carrier service agent will perform maintenance/inspection and adjustment works to keep your chiller in its optimal condition, and you will be given priority for chiller repairs, in case there is a problem.

It is recommended to perform a complete chiller overhaul every few years to keep it in its optimal condition. Under the maintenance contract we advise our customers of the timing and the parts to be overhauled. There is an additional contract for water quality control and cleaning of the heat transfer tubes in the water system. We recommend that you also take out this contract.

### 7.2 - Inspection report

We issue an inspection report for the annual maintenance under the contract. The report contains a thorough description of the inspection/adjustment items and ensures that Carrier service personnel will not overlook any of the inspection items. At the time of inspection the Carrier service personnel will fill in the report, leave one copy with the customer, and take one copy back to the office to be available for future maintenance works.


We will not re-issue this report, so please be sure to keep it in a safe place. Show it to the Carrier service technicians when they visit you.

## 7.3 - Warranty

- Your Carrier service agent will fill in the warranty and leave it with you. Please check the warranty period, read the document carefully and keep it in a safe place.
- If the chiller fails within the warranty period under normal operating conditions, we will replace all necessary spare parts or repair the chiller free-of-charge.
- After the warranty period expires, all repair costs will be charged. Consult your service agent.
- For all other items please read your warranty document.


# APPENDIX 1 - TROUBLESHOOTING FLOWCHART

Problem list	
Problem 1.	Chiller does not run
Problem 2.	Chilled-water temperature is high
Problem 3.	Generator alarm
Problem 4.	Combustion alarm (16DJ only)
Problem 5.	Water alarm
Problem 6.	Motor alarm
Problem 7.	System alarm

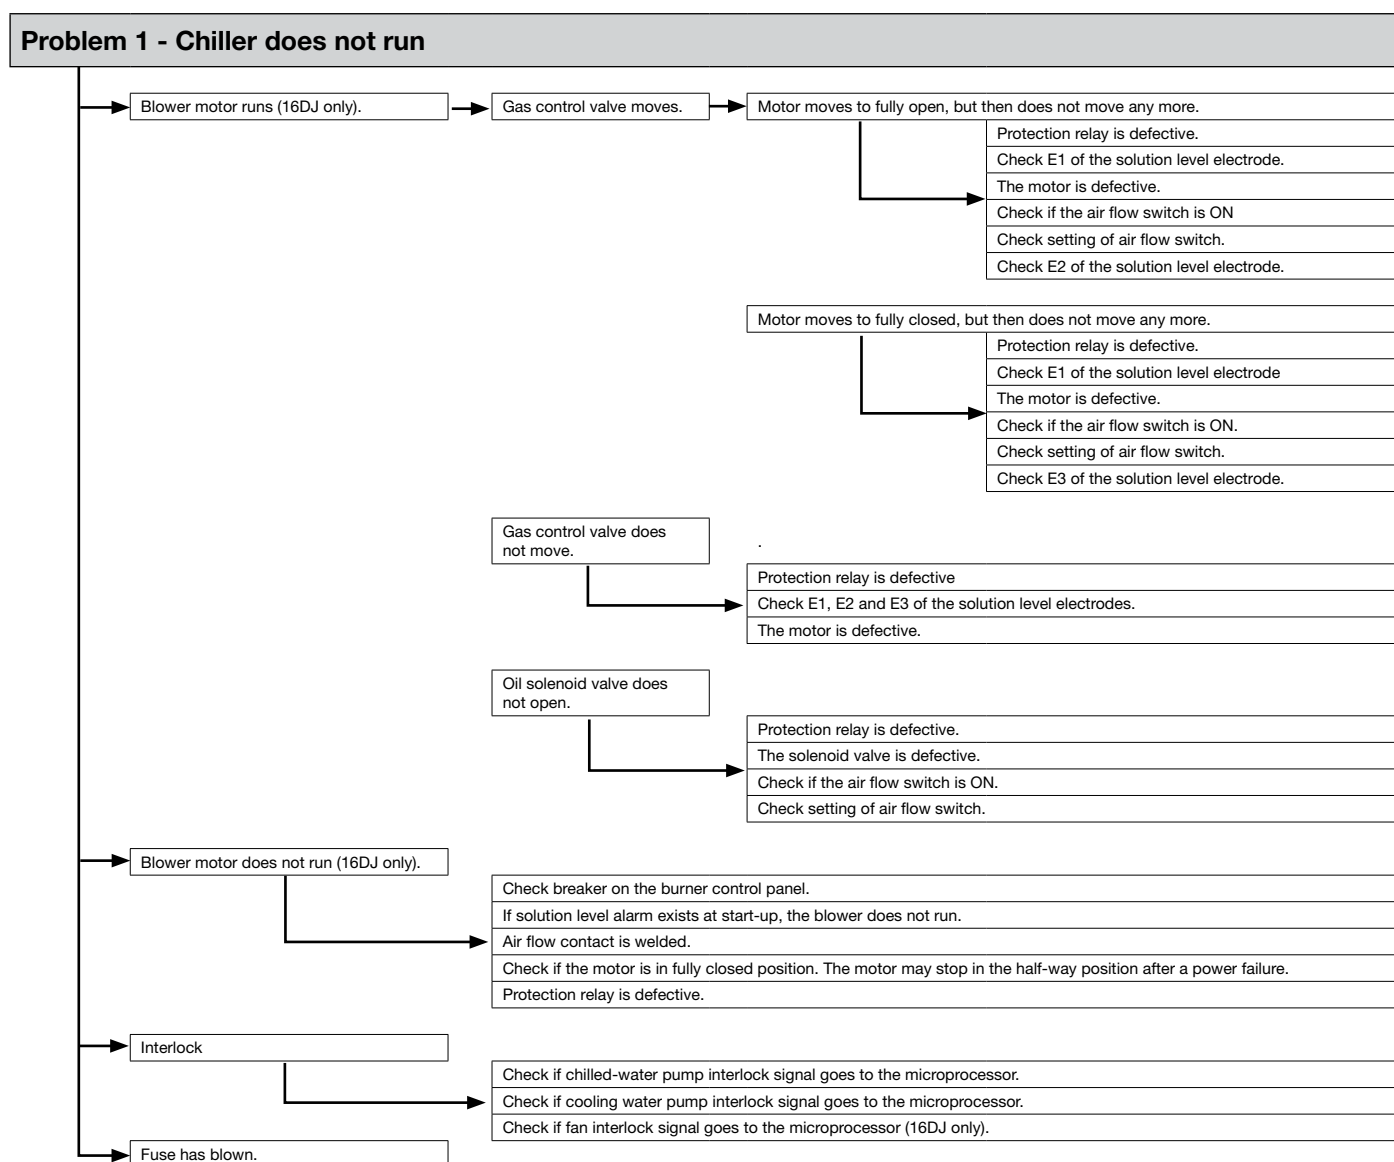

**NOTE:** The troubleshooting charts apply to all 16 series absorption chillers, and the service engineer should determine if the failure mode is relevant to the specific machine.

## Problem 2 - Chilled-water temperature is high.

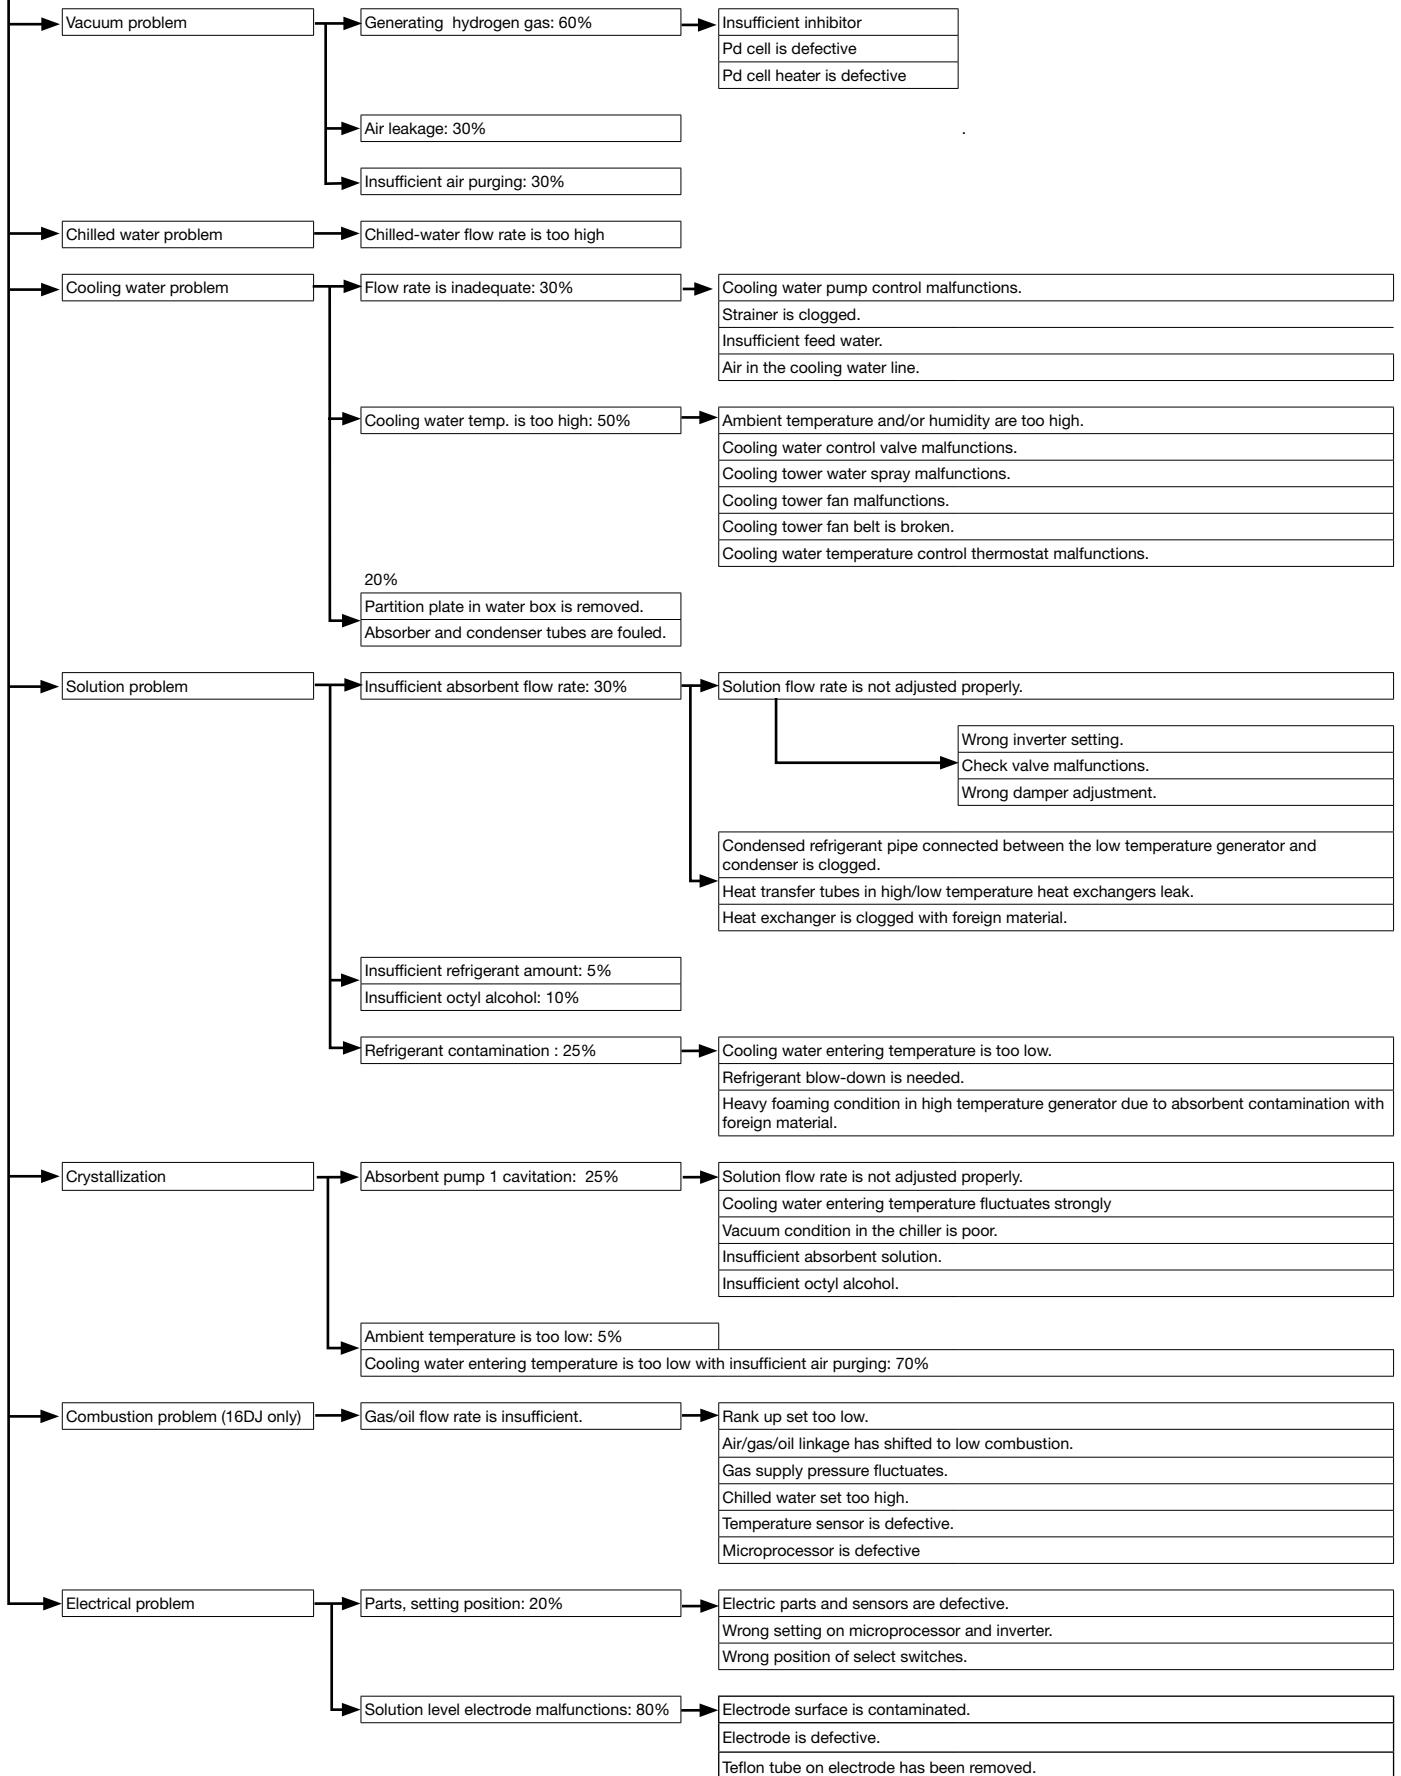


**NOTE:** The troubleshooting charts apply to all 16 series absorption chillers, and the service engineer should determine if the failure mode is relevant to the specific machine.

### Problem 3 - Generator alarm.



**NOTE:** The troubleshooting charts apply to all 16 series absorption chillers, and the service engineer should determine if the failure mode is relevant to the specific machine.


## Problem 4 - Combustion alarm (16DJ only)

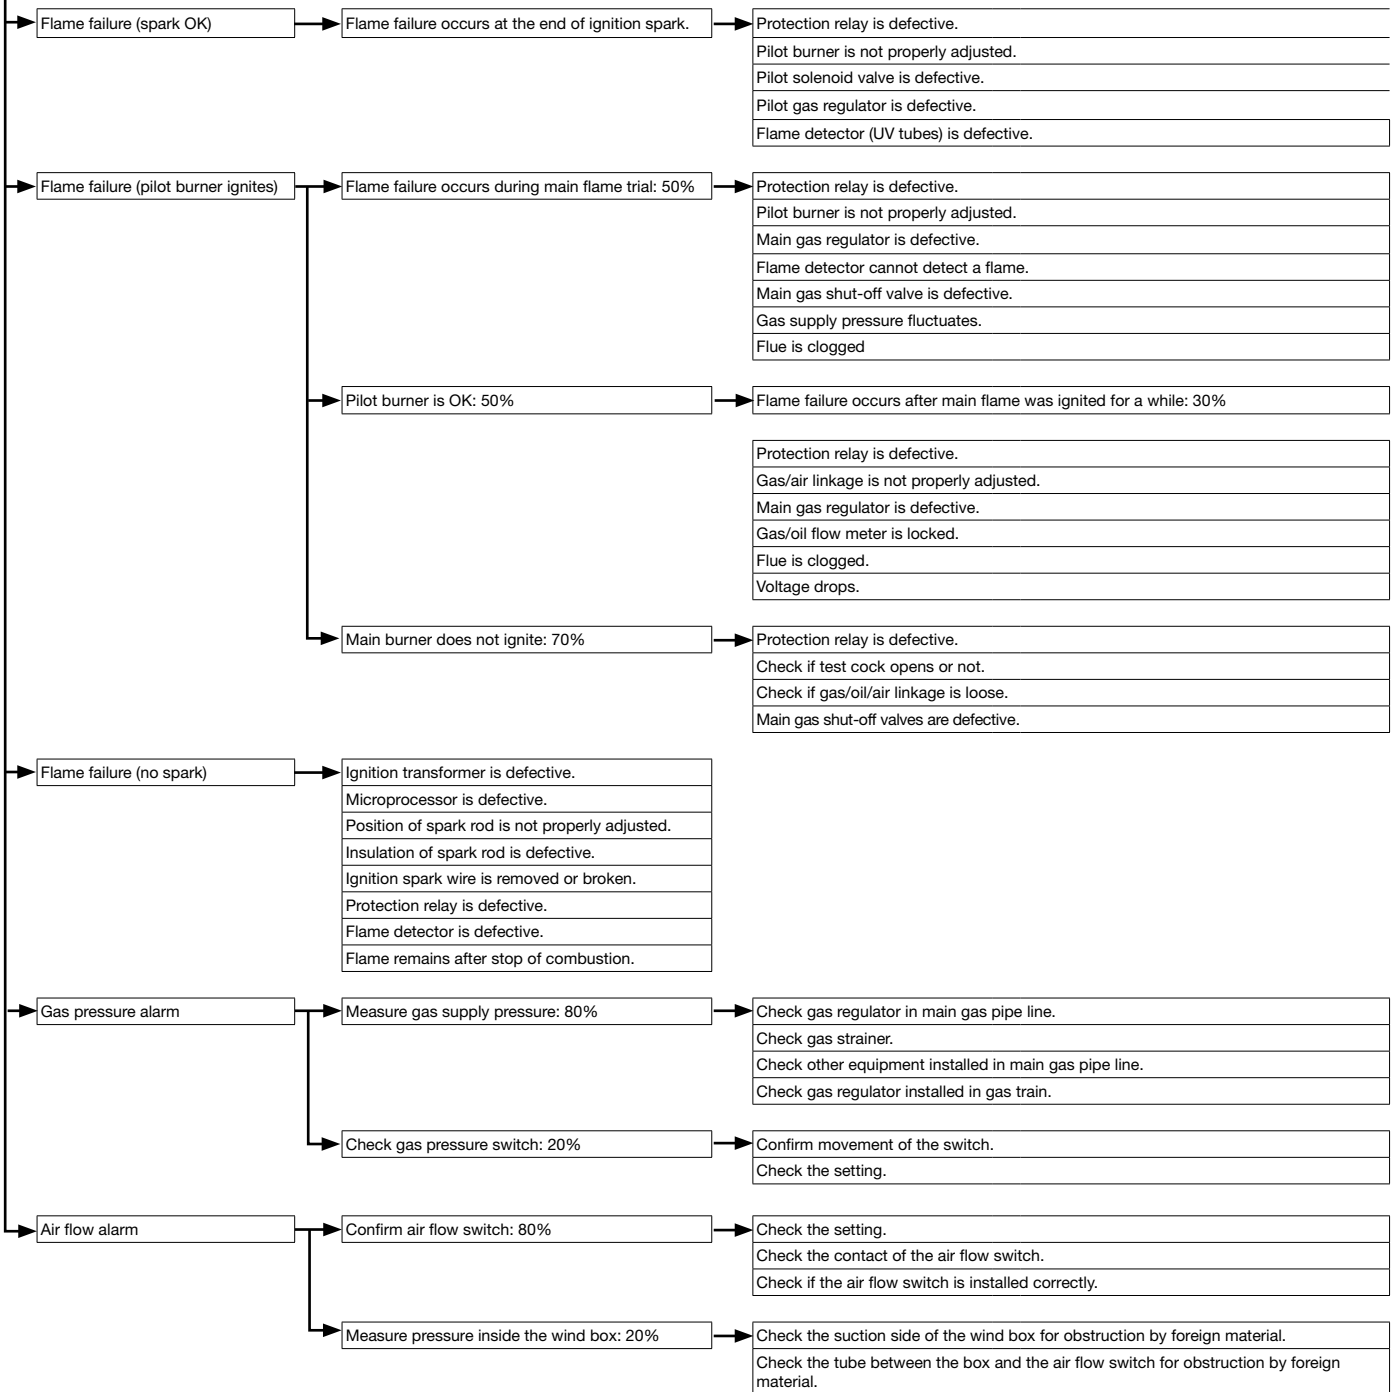


**NOTE:** The troubleshooting charts apply to all 16 series absorption chillers, and the service engineer should determine if the failure mode is relevant to the specific machine.



## Problem 5 - Water alarm

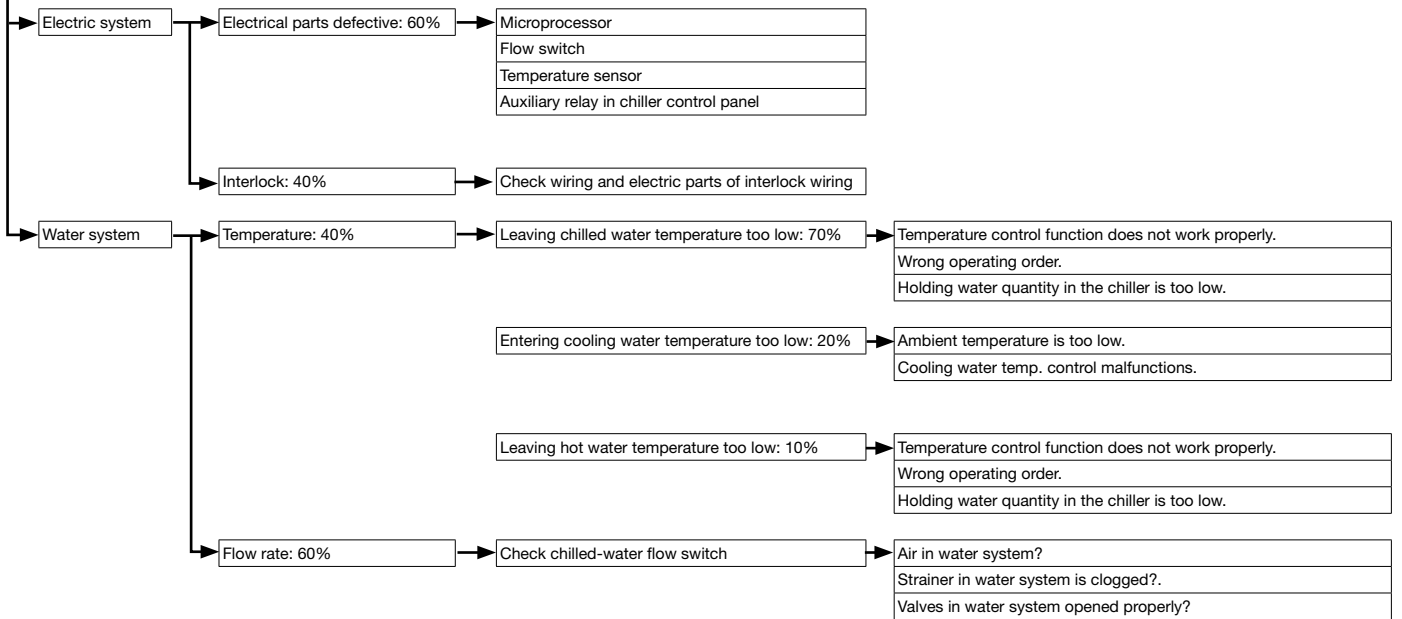

## Problem 6 - Motor alarm

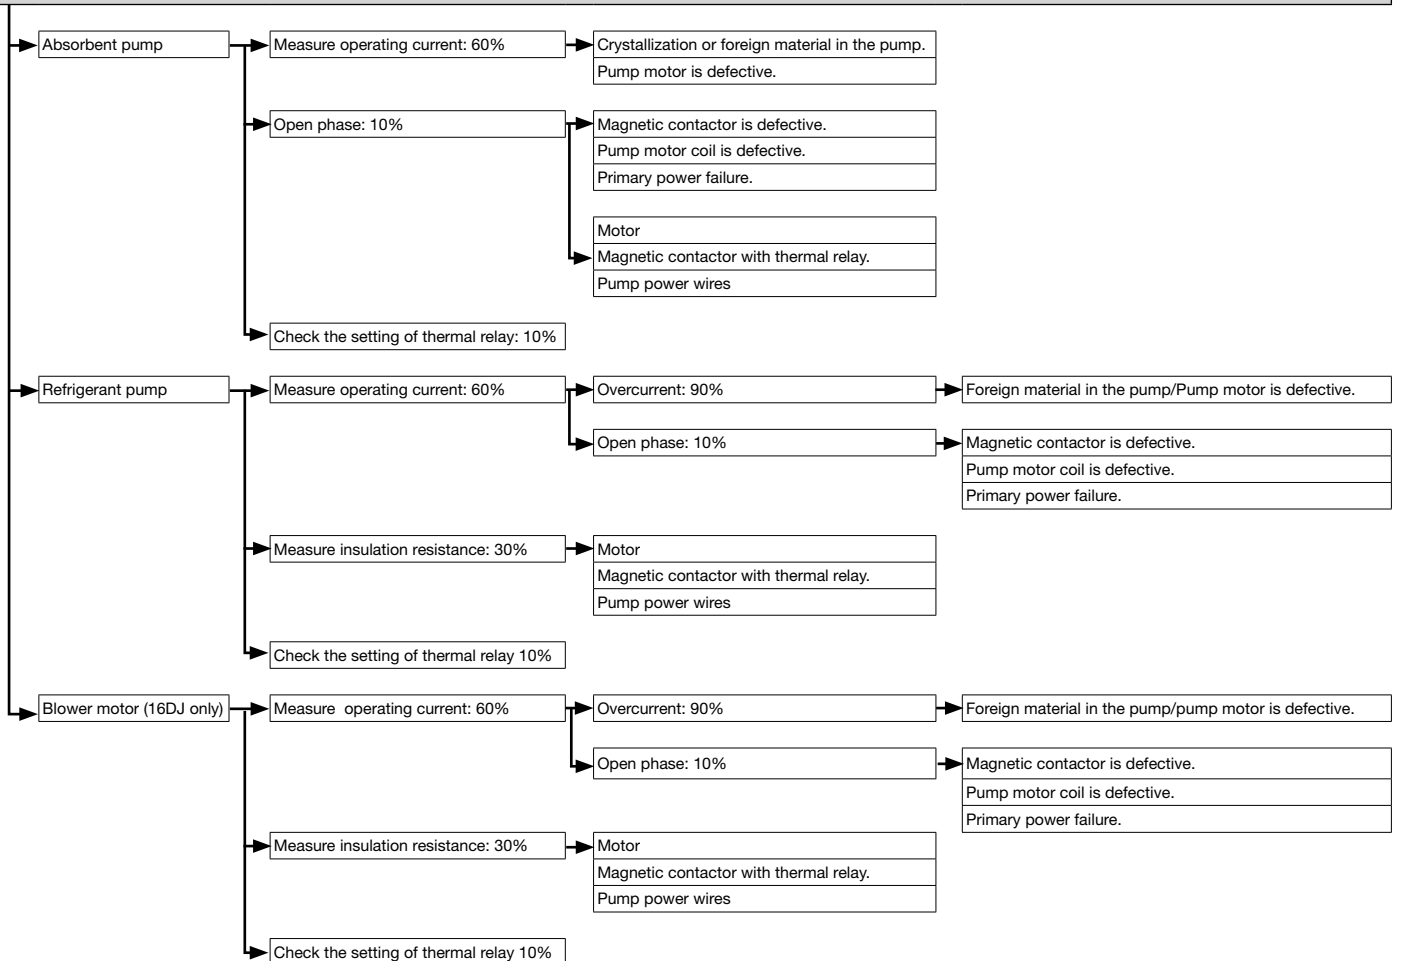

**NOTE:** The troubleshooting charts apply to all 16 series absorption chillers, and the service engineer should determine if the failure mode is relevant to the specific machine.

**Problem 7 - System alarm**

Check if chilled water pump interlock signal goes to the microprocessor.
Check if cooling water pump interlock signal goes to the microprocessor.
Check if cooling water pump interlock signal goes to the microprocessor.
Check if fan interlock signal goes to the microprocessor (16 DJ only).



*Carrier*  
**SANYO**

Order No.: 11634-76, 08.2007. Supersedes order No.: New  
Manufacturer reserves the right to change any product specifications without notice.



Manufactured by: Sanyo Electric Co. Ltd., Dalian, China  
Printed in the Netherlands.